



9 - Loctite PST Pipe Sealant (92-909822)  
 14 - 2 Cycle Outboard Oil (92-13249A24)

A = To Tell-Tale Hose      B = To Adaptor Plate

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		18488F 1	CYLINDER HEAD	2		3
2	27	822844 1	GASKET	2		3
3	10	98534	SCREW (2 IN.)	23	(QTY. OF 24 ON 150/175)	3
3	10	827426	SCREW	1	(200)	
4	17	63779	DOWEL PIN	4		3
5	27	62386	GASKET	2		3,2
6		90390A 1	COVER	2		3
7		75692	THERMOSTAT	2		3
8	10	35386	SCREW (5/16-18 X 1 IN.)	4		3
9	22	68727	ELBOW	1		3
10	32	77653112	HOSE (12-3/4 IN.)	1		5,3
11	22	68728	FITTING	1		3
12	54	816311	STA-STRAP	AR		8
13	32	77653112	HOSE (11-1/2 IN.)	1		5,3
14	32	77653112	HOSE (7-1/2 IN.)	1		5,3
15		97465	TEMPERATURE SENDER (STBD.)	1		3
16	22	815914	T-FITTING	1		
17		13536A 6	TEMPERATURE SENSOR (PORT)	1		
18		13715 1	RETAINER	2		3
19	10	98257	SCREW (5/16-18 X 1/2)	2		3
20		826858	KNOCK SENSOR (200)	1		
21	11	45076	NUT	1		
22		17735A 2	ADAPTOR PLATE	1		
23	10	28668	SCREW (1/4-20 X 7/8)	8		
24	27	14697 2	GASKET	1		2
25		11645 3	REED BLOCK	6		5
26	54	55098	J-CLAMP	1		
27	10	55715	SCREW (1/4-20 X 7/8 IN.)	6		
28	10	90197	SCREW (1/4-20 X 1-1/8 IN.)	6		
29	27	16737 1	GASKET	1		2
-	27	815791A92	ENGINE GASKET SET	1		
-		<a href="#">823434A97</a>	POWERHEAD	1	(150)	
-		<a href="#">812817A97</a>	POWERHEAD	1	(175)	
-		<a href="#">813043A97</a>	POWERHEAD	1	(200)	