

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		14856A	DETONATION CONTROLLER ASSEMBLY	1	
2	10	88447	SCREW, DETONATION CONTROLLER	3	
3	12	38833	WASHER, DETONATION CONTROLLER	3	
4		13381	PLATE	1	
5	84	60466A20	CABLE ASSEMBLY	1	
6	10	62568	SCREW, CABLE TO PLATE	1	
7	23	94304	BUSHING	3	
8		41470A12	OIL INJECTION WARNING MODULE	1	
9		14851T	INDICATOR, THROTTLE POSITION	1	
10	10	15150	SCREW, INDICATOR	2	
11	13	26995	LOCKWASHER, INDICATOR SCREW	2	
12	12	46101	WASHER, INDICATOR SCREW	2	
13	23	15885	SLEEVE	1	
14		13221A	TEMPERATURE SENSOR ASSEMBLY	1	
15	25	45711	"O" RING	1	2
16	10	57583	SCREW, TEMPERATURE SENSOR	3	
17	13	26995	LOCKWASHER, TEMPERATURE SENSOR	3	
18	10	42813	SCREW	1	
19		813501	PLATE	2	
-	27	14697A87	GASKET SET		

