



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		12430A 4	SENSOR ASSEMBLY	1		
2	10	48409	SCREW, SENSOR ATTACHING (E	1		
3		815699	OIL PUMP	1		
3A		814103	BEARING (W/SEAL)	1		
4	25	11379	"O" RING, OIL PUMP	1		
5	23	41429A 2	BEARING ASSEMBLY, DRIVE GE	1		
6	43	12726	DRIVEN GEAR	1		
7	10	32228	SCREW, OIL PUMP TO CRANKCA	1		
7	10	41507	SCREW, OIL PUMP TO CRANKCA	1		
8		19385 12	LINK, THROTTLE LEVER TO OIL	1		
9	32	43016 19	TUBING, OIL PUMP	1		
10		99443T	OIL RESERVOIR	1		
11	54	41582 3	CLAMP, OIL HOSE (LARGE)	2		
12	32	43017 36	TUBING, OIL RESERVOIR TO OIL	1		
13	10	69020	SCREW, OIL RESERVOIR ATTAC	3		
14	12	42118	WASHER, OIL RESERVOIR SCF	6		
15	25	42117	GROMMET, OIL RESERVOIR SCF	3		
16	23	42116	BUSHING, OIL RESERVOIR SCRE	3		
17	32	99127109	TUBING, OIL	1		
18	22	42425	FITTING, OIL TUBING	1		
19	32	90729 25	HOSE, OIL (6-3/4")	1		
20			QUICK DISCONNECT KIT	1	(Kit - NLA)(Order parts separately)	
21	32	99439	HOSE, OIL	1		
22		12540A 3	HOUSING	1		
23		12242A 1	LATCH	1		
24	21	43278	FITTING, CHECK CALVE (CRANK)	1		
25	1257	8742 1	OIL TANK	1		
26	36	43298A 2	CAP ASSEMBLY, OIL TANK	1		
27	25	11332	"O" RING, CAP	1		
28		43295A 5	ADAPTOR HOUSING ASSEMBLY	1		
29	25	11332	"O" RING, ADAPTOR HOUSING	1		
30	32	99802	TUBE, OIL PICK-UP	1		
31	36	43300A 1	CAP ASSEMBLY, OIL RESERVOIR	1		
32	27	43307	GASKET, RESERVOIR CAP	1		
33		99022A 1	FLOAT ASSEMBLY	1		
34	11	99265	PUSHNUT	1		
35	54	41582 4	CLAMP, OIL HOSE (SMALL)	2		
36	54	90077	STA-STRAP	AR		5
37		12335A 1	HOLD-DOWN KIT	1		
38		12323A 1	BUNGY CORD ASSEMBLY	1		