



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1647	9148A30	GEAR HOUSING (X-LONG) (BLAC)	1		
-	1647	9148A31	GEAR HOUSING (X-LONG) (GRAY)	1		
1	1647	9148A11	GEAR HOUSING ASSEMBLY (B	1		
1	1647	9148A12	GEAR HOUSING ASSEMBLY (B	1		
47		78956	SHIFT CAM	1		
48		89594A 1	FOLLOWER, CAM	1		
49		79911	ROD, CLUTCH ACTUATOR	1		
50	24	79910	SPRING, COMPRESSION	2		
51	12	78910	WASHER, SPRING	AR		6
52	17	78906	PIN, SPRING LOCATOR	1		
53		14469	BEARING CUP	1		
54	30	88957A 1	BALL BEARING	1		
55		N.S.S.	REVERSE GEAR (PART OF 43-1	1		5
56	31	15844	ROLLER BEARING	1		
57	17	78909	DETENT PIN, RATCHET	2		
58	52	78959	RATCHET, SLIDIING CLUTCH	1		
59	17	78905	CROSSPIN, RATCHET	1		
60	24	78962	SPRING, RETAINING - CROS	2		
61	43	18475A 1	FORWARD GEAR	1		
62	23	17615 1	SPACER SHIM .125"	AR		6
62	23	17615 2	SPACER SHIM .127"	AR		6
62	23	17615 3	SPACER SHIM .129	AR		6
62	23	17615 4	SPACER SHIM .131"	AR		6
62	23	17615 5	SPACER SHIM .133"	AR		6
62	23	17615 6	SPACER SHIM .135"	AR		6
62	23	17615 7	SPACER SHIM .137"	AR		6
62	23	17615 8	SAPCER SHIM .139"	AR		6
62	23	17615 9	SPACER SHIM .141"	AR		6
62	23	17615 10	SPACER SHIM .143"	AR		6
62	23	17615 11	SPACER SHIM .145"	AR		6
62	23	17615 12	SPACER SHIM .147"	AR		6
62	23	17615 13	SPACER SHIM .149"	AR		6
63	31	15841	ROLLER BEARING	1		
64	12	17616	THRUST RING	1		
65	25	31534	"O" RING, BEARING CARRIER	1		11
66		18447A 2	BEARING ADAPTOR	1		
67	31	15843	ROLLER BEARING	1		
68	12	18448	THRUST WASHER	2		
69	31	15842	THRUST BEARING	2		
70	44	18446	PROPELLER SHAFT	1		
71		18444A 1	BEARING CARRIER	1		