



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	1590	8343A 7	DRIVE SHAFT HOUSING (LONG)	1			
1	1590	8343A 8	DRIVE SHAFT HOUSING (LONG)	1			
1	3503	9748A 1	DRIVE SHAFT HOUSING (X-LONG)	1			
1	3503	9748A 2	DRIVE SHAFT HOUSING (X-LONG)	1			
2	16	56295	STUD, DRIVE SHAFT HSG./GE/	2			
3		25067	BUMPER, LOWER MOUNT SCRE	2			
4	10	63474	SCREW, LOWER MOUNT	2			
5		78249	MOUNT, LOWER (LONG)	2			
5		77327	MOUNT, LOWER (X-LONG)	2			
6	12	49339	WASHER, LOWER MOUNT SCRE	2			
7	11	25096	NUT, LOWER MOUNT SCREW	2			
8		88238A 1	GROUND WIRE ASSEMBLY	1			
9	54	67076	CLAMP, LOWER MOUNT	2			
10	10	66727	SCREW, LOWER MOUNT CLAMP	4			
11		67077	COVER, LOWER MOUNT CLAMP	2			
11		67077T 6	COVER, LOWER MOUNT CLAMP	2			
12	10	88417	SCREW, COVER ATTACHING (5/	4			
13	11	35521	NUT, NYLON - COVER TO CLAMP	4			
14		88238A 2	GROUND WIRE ASSEMBLY	1			
15	10	41508	SCREW, GROUND WIRE	1			
16	12	48926	WASHER, GEAR HOUSING STUC	1			
17	11	29489	NUT, GEAR HOUSING STUD (CAI	1			
18	12	45176	WASHER, GEAR HOUSING STUC	2			
19	11	34933	NUT, GEAR HOUSING STUD	2			
20	19	64649	PLUG, DRIVE SHAFT HOUSING	1			
21		89743	EXHAUST TUBE	1			
22		66350	SEAL, EXHAUST TUBE - LOWER	1			
23		86027	SEAL, EXHAUST TUBE - UPPER	1			
24	32	67295	TUBE, WATER (LONG)	1			
24	32	74729	TUBE, WATER (X-LONG)	1			
25	27	99173 1	GASKET, DRIVE SHAFT HOUSING	1		2	
26		41945A 7	PLATE ASSEMBLY, DRIVE SHAF	1			
27		18398 2	SEAL, BRACKET	1			
28		68011	BRACKET, SEAL RETAINING	1			
29	10	812832	SCREW, BRACKET TO PLATE (	12			
30	17	20033	DOWEL PIN, LOCATING	2			
31	26	38970	SEAL, WATER TUBE	1		2	
32	10	90192	SCREW, EXTENSION PLATE	6			
33	27	99177 2	GASKET	1	(DRIVE SHAFT HOUSING PLATE 2		
34	12	25370	WASHER, POWER HEAD STUD	4			
35	11	68254	NUT, POWER HEAD STUD	4			