



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		18896A	COVER ASSEMBLY, FLYWHEEL	1		
2		79918A	COVER ASSEMBLY, FLYWHEEL	1		
3	10	37572	SCREW, TIMING MARKER	2		
4	12	72761	WASHER, TIMING MARKER SC	2		
5		79022	MARKER, TIMING	1		
6	19	45907	PLUG, FLYWHEEL	1		
7	11	52901	NUT, FLYWHEEL	1		
8	12	68229	WASHER, FLYWHEEL	1		
9	266	9841A	FLYWHEEL ( USE WITH REF. #1)	1		
9	257	7555A	FLYWHEEL (USE WITH REF. #2)	1		
10	10	32417	SCREW, FLYWHEEL PLATE	8		
11	10	68997	SCREW, FLYWHEEL HUB	8		
12	398	9610A	STATOR - (USE WITH REF. #1)	1		
13	10	90045	SCREW, STATOR - (USE WITH R	4		
14	13	26996	WASHER, STATOR SCREW - (US	4		
12	398	5454A	STATOR - (USE WITH REF. #2)	1		
13	10	76566	SCREW, STATOR - (USE WITH R	4		
15		96455A	TRIGGER PLATE ASSEMBLY	1		
16	84	93388A	WIRE ASSEMBLY, PLATE TO ST	1	(BLACK)	
17	50	79472	STARTER MOTOR	1		
18		56703	COLLAR, STARTER MOTOR	2		
19		68042	STOP, RUBBER - STARTER MOT	2		
20	13	26992	LOCKWASHER, STARTER MOTO	1		
21	11	20890	NUT, STARTER MOTOR TERMIN	1		
22	84	93388A	WIRE ASSEMBLY, SOLENOID TO	1	(BLACK)	
23	10	69035	SCREW, CABLE TO STARTER M	1		
24	19	89219	PLUG, FLYWHEEL COVER	1		