



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1647	9148A30	GEAR HOUSING (X-LONG) (BLAC)	1	
-	1647	9148A31	GEAR HOUSING (X-LONG) (GRAY)	1	
1	1647	9148A11	GEAR HOUSING ASSEMBLY (BI	1	
1	1647	9148A12	GEAR HOUSING ASSEMBLY (G	1	
2	22	85822A 1	CONNECTOR ASSEMBLY	1	
3	17	20033	DOWEL PIN, GEAR HOUSING	2	
4	16	18978	STUD, GEAR HOUSING (3-7/1	1	
5	16	57920	STUD, GEAR HOUSING (2-1/1	2	
6	16	56297	STUD, WATER PUMP (3-3/8"	1	
7	16	30667	STUD, WATER PUMP (3-1/4"	2	
8	31	42647A 1	ROLLER BEARING, DRIVE SH	1	
9	23	43998	SLEEVE, LUBRICATION	1	
10	53	78907	RETAINING RING	1	
11	45	44209	DRIVE SHAFT	1	
12		N.S.S.	PINION GEAR (PART OF 43-184	1	5
13	12	92721	WASHER, PINION GEAR	1	
14	11	35921	NUT, PINION GEAR TO DRIVE :	1	
15	15	42637A 1	SHIM ASSEMBLY	AR	ROLLER BEARIING TO GEAR HO 6
16	31	36387A 1	ROLLER BEARING, DRIVE SHA	1	
17	11	42633	NUT, DRIVE SHAFT BEARING	1	
18	46	42579A 3	WATER PUMP BASE ASSEMBL	1	9
19	27	42631 1	GASKET	1	WATER PUMP TO GEAR HOUSI 9,11
20	25	90011	"O"RING, WATER PUMP	1	9,11
21	26	89238	OIL SEAL, WATER PUMP	1	9,11
22	26	16977	OIL SEAL, WATER PUMP	1	9,11
23	27	85608 1	GASKET, LOWER - WATER P	1	9,11
24	27	85609 1	GASKET, UPPER - WATER PL	1	9,11
25		32435	FACE PLATE, WATER PUMP	1	9
26	46	96148A 1	WATER PUMP BODY ASSEMBL	1	9
27		48752	INSERT, WATER PUMP BOD	1	9
28	26	38970	SEAL, RUBBER - WATER INLU	1	9,11
29	47	89984	IMPELLER, WATER PUMP	1	9
30	28	56654	KEY, IMPELLER DRIVE	1	9
31	10	96411	SCREW, WATER PUMP (2-1/4"	1	
32	12	29245	WASHER, WATE PUMP SCREW	2	
33	11	13438	NUT, WATER PUMP STUD	2	
34	12	36001	WASHER, WATER PUMP STUC	1	
35	11	13436	NUT, WATER PUMP STUD	1	
36	25	30271	RING, RUBBER (DRIVE SHAFT)	1	9,11
37	23	29804	SLEEVE, GUIDE - WATER INLE	1	9
38		78907	SHAFT SHIF - LOWER	1	