



14 2 Cycle Outboard Oil (92-13249A24)
51 Loctite 222 (Obtain Locally)

OIL INJECTION COMPONENTS

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		12430A	4 SENSOR ASSEMBLY	1		
2	10	812832	1 SCREW-SENSOR ATTACHING (11)	1		
3		41470A26	1 WARNING MODULE ASSEMBLY	1		
4	12	30164	1 WASHER-WARNING MODULE SC	3		
5	10	69020	3 SCREW (7/8 IN.)	3		
6		12335A	1 REMOTE OIL TANK HOLD-DOWN	1		
7		12323A	1 BUNGY CORD ASSEMBLY	1		
8	1257	8742	1 OIL TANK	1		
9	36	43298A	2 CAP ASSEMBLY-OIL TANK	1		
10	25	11332	1 O RING-CAP	1		
11		816190A	3 ADAPTOR HOUSING	1		
12	25	11332	1 O RING	1		
13	32	99802	1 TUBE-OIL PICK-UP	1		
14	32	99439	1 HOSE	1		
15		815698T	1 OIL PUMP	1	(135	
16		815699T	1 OIL PUMP	1	(150/XR6/MAGNUM III/175/200)	
17		814103	2 WORM BUSHING	1		
18	25	11379	1 O-RING	1		
19	23	41429A	2 BEARING ASSEMBLY-DRIVE GEA	1		12
20	43	14563	1 DRIVEN GEAR	1		
21	10	32228	1 SCREW (10-32 X 5/8 IN.)	1		
22	10	41507	1 SCREW (10-32 X 1-1/8 IN.)	1		
23		19385	5 LINK-THROTTLE LEVER TO OIL F	1		
24	22	42425	4 FITTING-OIL TUBING	1		
25		NSS	1 PLUG	1		6
26	32	830756109	1 TUBING-OIL (6 IN.)	1		
27		99443	6 OIL RESERVOIR	1		
28	10	69020	3 SCREW-OIL RESERVOIR ATTACH	3		
29	12	42118	6 WASHER-OIL RESERVOIR SCRE	6		
30	25	42117	3 GROMMET-OIL RESERVOIR SCR	3		
31	23	42116	3 BUSHING-OIL RESERVOIR SCRE	3		
32	32	823814	55 TUBING-OIL RESERVOIR TO OIL	1		
33	54	816311	1 STA-STRAP	AP		5
34	36	43300A	9 CAP ASSEMBLY-OIL RESERVOIR	1		
35		99022A	1 FLOAT ASSEMBLY	1		
36	11	99265	1 PUSHNUT	1		
37	27	43307	1 GASKET-RESERVOIR CAP	1		
38		NSS	1 DECAL-RESERVOIR WARNING	1		6