



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1590	8343A 7	DRIVE SHAFT HOUSING ASSEM	1		
2	16	56295	STUD, DRIVE SHAFT HOUSING	2		
2	16	74732	STUD, DRIVE SHAFT HOUSING	2		
3	54	67076	CLAMP, LOWER MOUNT	2		
4	10	66727	SCREW, LOWER MOUNT CLAMP	4		
5		67077	COVER, LOWER MOUNT CLAMP	2		
6	10	88417	SCREW, COVER ATTACHING (5/16)	4		
7	11	35521	NUT, NYLON - COVER TO CLAMP	4		
8		67703	STRAP, SWIVEL BRACKET RETAINING	1		
9	10	67769	SCREW, STRAP TO DRIVE SHAFT	1		
10	11	25269	NUT, STRAP TO DRIVE SHAFT	1		
11	12	73862	WASHER, GEAR HOUSING STUD	1		
12	11	29489	NUT, GEAR HOUSING STUD (CAL)	1		
13	12	45176	WASHER, GEAR HOUSING STUD	2		
14	11	34933	NUT, GEAR HOUSING STUD	2		
15	19	64649	PLUG, DRIVE SHAFT HOUSING	1		
16		89743	TUBE, EXHAUST	1		
17		66350	SEAL, EXHAUST TUBE-LOWER	1		
18		86027	SEAL, EXHAUST TUBE - UPPER	1		
19	32	67295	TUBE, WATER (LONG SHAFT)	1		
19	32	74729	TUBE, WATER (EXTRA LONG SH)	1		
20	27	88727	GASKET, DRIVE SHAFT HOUSING	1		6
21		86585A 3	PLATE ASSEMBLY, DRIVE SHAFT	1		
22		70748 2	SEAL, BRACKET	1		
23		68011	BRACKET, SEAL RETAINING	1		
24	10	48408	SCREW, BRACKET TO PLATE	12		
25	17	20033	DOWEL PIN, LOCATING	2		
26	26	38970	SEAL, WATER TUBE	1		6
27	27	78068	GASKET, DRIVE SHAFT HOUSING	1		6
28	12	25970	WASHER, POWERHEAD STUD	10		
29	11	69254	NUT, POWERHEAD STUD	10		
30		78137	DIFFUSER, EXHAUST	1		
31	27	78246	GASKET, EXHAUST DIFFUSER	1		6
32	16	66021	STUD, DIFFUSER TO PLATE	6		
33	12	20533	WASHER, DIFFUSER STUD	6		
34	11	30506	NUT, DIFFUSER STUD	6		
--		78148A 1	SPACER ASSEMBLY (EXTRA LONG)	1		
--	17	20033	PIN, LOCATING -SPACER (EXT)	2		
--	27	89221A80	GASKET SET			