



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		92459A	4 HYDRAULIC PUMP ASSEMBLY	1		
4	84	87379A	2 WIRE, SOLENOID TO SOLENOID	1		
4	84	61600A	9 WIRE, SOLENOID TO SOLENOID	1		
5	84	79139A	1 BATTERY CABLE, RED (POSITIVE)	1		
5	84	79138A	4 BATTERY CABLE, BALCK (NEGA)	1		
6		87760	1 PLATE, MOUNTING	1		
7	10	39349	1 SCREW, MOUNTING PLATE TO B	1		
8	13	26993	1 LOCKWASHER, MOUNTING PLAT	1		
9	10	90271	2 SCREW, HYDRAULIC PUMP (5/8"	2		
10	13	58643	2 LOCKWASHER, HYDRAULIC PUM	2		
11		87762	1 BRACKET, HYDRAULIC PUMP	1		
12	10	69698	2 BOLT, BRACKET TO TRANSOM (E	2		
13	13	58643	2 LOCKWASHER, BRACKET SCREW	2		
14	11	46335	2 NUT, BRACKET SCREW	2		
15		90318	1 BRACKET, MOUNTING-STARTER	1		
16	10	90285	1 SCREW, MOUNTING BRACKET (E	1		
17	12	56720	1 WASHER, MOUNTING BRACKET	1		
18	11	29488	2 NUT, MOUNTING BRACKET TO F	2		
19		45915	1 TERMINAL BLOCK	1		
21	10	62568	2 SCREW, WIRE TO TERMINAL BL	2		
22	84	74023A	1 HARNESS ASSEMBLY, HYDRAUL	1		
23		88075	1 RETAINER, HARNESS TO MOUN	1		
26	89	68258	2 STARTER SOLENOID	2		
27	10	87903	4 SCREW, STARTER SOLENOID TI	4		
28	13	26993	4 LOCKWASHER	4	STARTER SOLENOID TERMINA	
29	11	68292	4 NUT, STARTER SOLENOID TERM	4		
30		46265	4 BOOT, RUBBER-STARTER SOLE	4		
31	13	26996	4 LOCKWASHER, STARTER SOLEN	4		
32	11	68219	4 NUT, STARTER SOLENOID TERM	4		