



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1		96290	PLATE, IGNITION	1			
2	332	7778A	SWITCH BOX	2			
3	10	90815	SCREW, SWITCH BOX (2-1/4")	2			
4	23	94304	SPACER, SWITCH BOX SCREW	2			
5	23	94453	BUSHING, SWITCH BOX SCREW	2			
6	11	45076	NUT, SWITCH BOX TERMINAL	8			
7	84	60871A10	WIRE ASSEMBLY, GROUND	2			
8	10	62568	NUT, SWITCH BOX TERMINAL	2			
9	84	62310A	CABLE	1	SWITCH BOX TO SWITCH BOX I		
10	10	69092	SCREW, IGNITION PLATE (1-1/4)	3			
11	13	26993	LOCKWASHER, IGNITION PLATE	3			
12	12	36042	WASHER, IGNITION PLATE SCRE	6			
13	12	67264	WASHER, IGNITION PLATE SCRE	6			
14	23	67268	BUSHING, IGNITION PLATE SCRI	3			
15	84	65999A	CABLE ASSEMBLY, BLACK	2			
16	10	20646	SCREW, CABLE TO IGNITION PL	1			
17		62351A	RECTIFIER	1			
18	10	20646	SCREW, RECTIFIER TO IGNITION	2			
20	11	45076	NUT, RECTIFIER TERMINALS	3			
21	87	33386A	MERCURY SWITCH	1			
22	10	20646	SCREW, MERCURY SWITCH (5/16	1			
23	11	45076	NUT, MERCURY SWITCH TERMI	1			
25	10	22028	SCREW, LEAD ATTACHING (1/2"	1			
26	84	88439A	BATTERY CABLE (POSITIVE)	1			
26	84	88439A	BATTERY CABLE (NEGATIVE)	1			
27	84	87266A	HARNESS, ENGINE	1			
28		61990	STA-STRAP, HARNESS AND CAB	3			
29	89	68258	SOLENOID, STARTER	1			
30	10	20540	SCREW, SOLENOID TO IGNITION	2			
31	13	26992	LOCKWASHER, SOLENOID SCRE	2			
32	84	65999A	CABLE ASSEMBLY, UPPER MOU	1			
33	13	26996	LOCKWASHER, SOLENOID TERM	2			
34	11	68219	NUT, SOLENOID TERMINALS (5/	2			
36	13	26993	LOCKWASHER, SOLENOID TERM	2			
37	11	68292	NUT, SOLENOID TERMINALS (5/	2			