



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1590	8343A 7	DRIVE SHAFT HOUSING ASSEM	1		
1	1590	8343A 8	DRIVE SHAFT HOUSING ASSEM	1		
2	16	56295	STUD, DRIVE SHAFT HSG./GE	2		
2	16	74732	STUD, DRIVE SHAFT HSG./GE	2		
3		25067	BUMPER, LOWER MOUNT SCRE	2		
4	10	63474	SCREW, LOWER MOUNT	2		
5		78249	MOUNT LOWER	2		
6	12	49339	WASHER, LOWER MOUNT SCRE	2		
7	11	25096	NUT, LOWER MOUNT SCREW	2		
8		88238A 1	GROUND WIRE ASSEMBLY	1		
9	54	67076	CLAMP, LOWER MOUNT	2		
10	10	66727	SCREW, LOWER MOUNT CLAMP	4		
11		67077	COVER, LOWER MOUNT CLAMP	2		
12	10	88417	SCREW, COVER ATTACHING (5/	4		
13	11	35521	NUT, NYLON - COVER TO CLAMP	4		
14		88238A 2	GROUND WIRE ASSEMBLY	1		
15	10	41508	SCREW, GROUND WIRE	1		
16	12	73862	WASHER, GEAR HOUSING STUC	1		
17	11	29489	NUT, GEAR HOUSING STUD (CAI	1		
18	12	45176	WASHER, GEAR HOUSING STUC	2		
19	11	34933	NUT, GEAR HOUSING STUD	2		
20	19	64649	PLUG, DRIVE SHAFT HOUSING	1		
21		89743	EXHAUST TUBE	1		
22		66350	SEAL, EXHAUST TUBE - LOWER	1		
23		86027	SEAL, EXHAUST TUBE - UPPER	1		
24	32	67295	TUBE, WATER (LONG)	1		
24	32	74729	TUBE, WATER (X LONG)	1		
25	27	99173	GASKET, DRIVE SHAFT HOUSING	1		2
26		41945A 6	PLATE ASSEMBLY, DRIVE SHAF	1		
27		70748 2	SEAL, BRACKET	1		
28		68011	BRACKET, SEAL RETAINING	1		
29	10	48408	SCREW, BRACKET TO PLATE (12		
30	17	20033	DOWEL PIN, LOCATING	2		
31	26	38970	SEAL, WATER TUBE	1		2
32	10	90192	SCREW, DIFFUSER TO PLATE	6		
33	27	99177	GASKET, DRIVE SHAFT HOUSING	1		2
34	12	25970	WASHER, POWER HEAD STUD	10		
35	11	69254	NUT, POWER HEAD STUD	10		
36		41941	DIFFUSER, EXHAUST	1		
--		78148A 1	SPACER ASSEMBLY (X LONG)	1		
--		20033	PIN, LOCATING SPACER (X L	2		