



COWLS AND FRONT COVER

| | | | | Parts List | | |
|-----|-------|----------|------------------------------|------------|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 2151 | 7620A 4 | COWL ASSEMBLY, PORT (BLACK) | 1 | | 1 |
| 1 | 2151 | 7620A22 | COWL ASSEMBLY, PORT (GRAY) | 1 | | 1 |
| 2 | | 67260 | SEAL, CONTROL CABLE | 1 | | |
| 3 | | 67258 | PAD, COWL ASSEMBLY TO FR | 1 | | |
| 4 | | 88227 | BLANKET, SOUND - COWL | 1 | | |
| 5 | | 87987 | BRACKET, COWL ATTACHING - L | 2 | | |
| 6 | | 87985 | BRACKET, COWL ATTACHING - L | 2 | | |
| 7 | 10 | 37562 | SCREW, UPPER AND LOWER BF | 8 | | |
| 8 | | 68049 | SHIELD, INLET - COWL (STARBO | 1 | | |
| 8 | | 68048 | SHIELD, INLET - COWL (PORT) | 1 | | |
| 9 | 10 | 48409 | SCREW SHIELD TO COWL | 4 | | |
| 10 | 2150 | 7619A 1 | COWL ASSEMBLY, STARBOARD | 1 | | 1 |
| 10 | 2150 | 7619A 5 | COWL ASSEMBLY, STARBOARD | 1 | | 1 |
| 11 | | 88227 | BLANKET, SOUND - COWL | 1 | | |
| 12 | | 67260 | SEAL, HARNESS | 1 | | |
| 13 | | 62628 | BARREL, RETAINING - COWL LA | 2 | | |
| 14 | | 46785A 5 | COWL LATCH ASSEMBLY | 2 | | |
| 15 | 10 | 31312 | SCREW, BARREL TO COWL LATI | 2 | | |
| 16 | | 15222 | BAR, ADJUSTING - COWL LATCH | 2 | | |
| 17 | | 62629 | BARREL, RETAINING COWL LAT | 2 | | |
| 18 | 24 | 62624 | SPRING, COWL LATCH | 2 | | |
| 19 | 12 | 30164 | WASHER, SPRING TO ADJUSTIN | 2 | | |
| 20 | 11 | 45812 | NUT, SPRING TO ADJUSTING BA | 2 | | |
| 21 | 2149 | 7532A 2 | COWL FRONT COVER ASSEMBL' | 1 | | 1 |
| 21 | 2149 | 7532A23 | COWL FRONT COVER ASSEMBL' | 1 | | 1 |
| 22 | | 67615 | BLANKET, SOUND - COWL FRC | 1 | | |
| 23 | | 87907 | HOOK, COWL FRONT COVER | 1 | | |
| 24 | 10 | 70332 | SCREW, HOOK TO COWL FROF | 1 | | |
| 25 | | 47341A 1 | STARTER ROPE ASSEMBLY (FOF | 1 | | |
| 26 | 38 | 15132 | EMBLEM (3") | 1 | | |
| 26 | 38 | 15132 1 | EMBLEM (6") | 2 | | |