



OIL INJECTION COMPONENTS

Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1		12430A	1 SENSOR ASSEMBLY	1			
2	10	48409	SCREW, SENSOR ATTACHING (E	1			
3		41033	OIL PUMP	1			
4	25	11379	"O" RING, OIL PUMP	1			
5	23	41429A	1 BEARING ASSEMBLY, DRIVE GE	1			
6	43	12726	DRIVEN GEAR	1			
7	10	32228	SCREW, OIL PUMP TO CRANKCA	1			
7	10	41507	SCREW, OIL PUMP TO CRANKCA	1			
8		96255	12 LINK, THROTTLE LEVER TO OIL	1			
9	32	43016	19 TUBING, OIL PUMP	1			
10		99443T	OIL RESERVOIR	1			
11	54	41582	3 CLAMP, OIL HOSE (LARGE)	2			
12	32	43017	36 TUBING, OIL RESERVOIR TO OIL	1			
13	10	69020	SCREW, OIL RESERVOIR ATTAC	3			
14	12	42118	WASHER, OIL RESERVOIR SCRE	6			
15	25	42117	GROMMET, OIL RESERVOIR SCF	3			
16	23	42116	BUSHING, OIL RESERVOIR SCRE	3			
17	32	99127	109 TUBING, OIL	1			
18	22	42425	FITTING, OIL TUBING	1			
19	32	90729	25 HOSE, OIL (6-3/4")	1			
20			QUICK DISCONNECT KIT	1	(Kit - NLA)(Order parts separately)		
21	32	99439	HOSE OIL	1			
22		12540A	3 HOUSING	1			
23		12242A	1 LATCH	1			
24	21	43278	FITTING, CHECK VALVE (CRANKI	1			
25	1257	8742	1 OIL TANK	1			
26	36	43298A	2 CAP ASSEMBLY, OIL TANK	1			
27	25	11332	"O" RING, CAP	1			
28		43295A	5 ADAPTOR HOUSING ASSEMBLY	1			
29	25	11332	"O" RING, ADAPTOR HOUSING	1			
30	32	99802	TUBE, OIL PICK-UP	1			
31	36	43300A	1 CAP ASSEMBLY, OIL RESERVOIR	1			
32	27	43307	GASKET, RESERVOIR CAP	1			
33		99022A	1 FLOAT ASSEMBLY	1			
34	11	99265	PUSHNUT	1			
35	54	41582	1 CLAMP, OIL HOSE (SMALL)	2			