



| Parts List |       |          |                             |     |                           |          |
|------------|-------|----------|-----------------------------|-----|---------------------------|----------|
| Ref        | Class | Part     | Description                 | Qty | Comment                   | Footnote |
| 1          |       | 13619A 1 | CYLINDER HEAD (HEMI-HEAD)   | 2   |                           |          |
| 1          |       | 15221A 1 | CYLINDER HEAD (TOP-HAT)     | 1   |                           |          |
| 2          | 27    | 41246    | GASKET, CYLINDER HEAD       | 2   |                           | 2        |
| 3          | 10    | 98534    | SCREW, CYLINDER HEAD (2")   | 23  |                           |          |
| 3          | 10    | 13450    | SCREW, CYLINDER HEAD (SPEC) | 1   |                           |          |
| 4          | 12    | 25909    | WASHER, CYLINDER HEAD SCR   | 24  |                           |          |
| 5          |       | 75692    | THERMOSTAT                  | 2   |                           |          |
| 6          | 27    | 62386    | GASKET, THERMOSTAT          | 2   |                           | 2        |
| 7          |       | 90390A 1 | COVER, THERMOSTAT           | 2   |                           |          |
| 8          | 10    | 35386    | SCREW, THERMOSTAT COVER     | 4   |                           |          |
| 9          | 22    | 68727    | FITTING, ELBOW - WATER HOSE | 1   |                           |          |
| 10         | 32    | 77653 77 | HOSE, WATER DISTRIBUTION    | 2   |                           |          |
| 11         | 22    | 68728    | FITTING, THERMOSTAT COVER   | 1   |                           |          |
| 12         |       | 73498    | STA-STRAP, WATER HOSES      | 4   |                           |          |
| 13A        |       | 97465    | TEMPERATURE SENDER (STAR)   | 1   |                           |          |
| 13B        |       | 13536A 6 | TEMPERATURE SENSOR (PORT)   | 1   |                           |          |
| 14         |       | 13715    | RETAINER, SENSOR AND SENS   | 2   |                           |          |
| 15         | 10    | 98257    | SCREW, RETAINER             | 2   |                           |          |
| 16         |       | 13192    | DETONATION SENSOR           | 1   |                           |          |
| 17         | 11    | 45076    | NUT, DETONATION SENSOR      | 1   |                           |          |
| 18         |       | 14593T   | ADAPTOR PLATE               | 1   |                           |          |
| 19         | 10    | 28668    | SCREW, ADAPTOR PLATE        | 8   |                           |          |
| 20         | 27    | 14697    | GASKET, ADAPTOR PLATE       | 1   |                           | 2        |
| 21         |       | 75953    | REED BLOCK                  | 6   |                           |          |
| 22         | 34    | 75362A 1 | REED ASSEMBLY               | 6   |                           |          |
| 23         |       | 96183    | REED CLAMP                  | 12  |                           |          |
| 24         | 10    | 14783    | SCREW, REEDS TO REED BLOC   | 60  |                           |          |
| 25         | 10    | 21558    | SCREW, REED BLOCK ATTACHM   | 6   |                           |          |
| 26         | 10    | 90197    | SCREW, REED BLOCK ATTACHM   | 6   |                           |          |
| 27         | 27    | 16737    | GASKET, ADAPTOR PLATE       | 1   |                           | 2        |
| --         | 27    | 14697A87 | GASKET SET                  | --  | CONTENTS INDICATED BY FOO |          |