



COWL MOUNTING BRACKET

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		76258A 2	BRACKET, REAR COWL	1		
2	22	76256	NOZZLE, TELL TALE	1		
4		67984	SEAL, REAR COWL BRACKET TC	1		
5		67228	SEAL, REAR COWL BRACKET TC	1		
6		67999	SEAL, REAR COWL BRACKET TC	2		
7	32	34395A 1	HOSE, TELL TALE (9") - USE WIT	1		
7A	32	34395A 1	HOSE, TELL TALE (4") - USE WIT	2		
7B	22	90824	TEE, TELL TALE HOSE - USE WIT	1		
8		61990	STA-STRAP, TELL TALE HOSE	2		
9		86386A 1	BRACKET ASSEMBLY, COWL SU	1		
10	10	66687	SCREW, REAR COWL BRACKET	4		
11		85651	HOUSING, COWL HINGE - PORT	2		
11		85650	HOUSING, COWL HINGE - STARE	2		
12	10	31294	SCREW, COWL HINGE HOUSING	8		
13	12	20583	WASHER, COWL HINGE HOUSING	8		
14	11	20361	NUT, COWL HINGE HOUSING SC	8		
15		87587	BRACKET, COWL MOUNTING - LI	1		
16		88804	RETAINER, WIRING HARNESS	1		
17	10	88865	SCREW, RETAINER TO BRACKET	2		
18		88508	SEAL, CONTROL CABLES	1		
19		67241	HOUSING, COWL LATCH	1		
20	10	57807	SCREW, COWL LATCH HOUSING	2		
21		87608	COWL LATCH	1		
22	24	60295	SPRING, COWL LATCH	1		
23	10	69093	SCREW, GROMMET AND LOWEF	2		
24	12	57427	WASHER, LOWER BRACKET SCF	4		
25	12	20346	WASHER, LOWER BRACKET SCF	4		
26	25	88033	GROMMET, LOWER BRACKET	2		
27	23	88180	BUSHING, LOWER BRACKET GR	2		