

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2151	7523A 2	COWL ASSEMBLY, PORT (WITHC	1		
2		67260	SEAL, CONTROL CABLE	1		
3		67258	PAD, COWL ASSEMBLY TO FR	1		
4		88227	BLANKET, SOUND-COWL (POR	1		
5		87987	BRACKET, COWL ATTACHING -L	2		
6		87985	BRACKET, COWL ATTACHING -L	2		
7	10	35386	SCREW, UPPER AND LOWER BF	8		
8		68049	SHIELD INLET - COWL (STARBO	1		
8		68048	SHIELD, INLET - COWL (PORT)	1		
9	10	57807	SCREW, SHIELD TO COWL	4		
10	2150	7524A 1	COWL ASSEMBLY, STARBOARD	1		
11		88226	BLANKET, SOUND - COWL (ST	1		
12		90274	SEAL, HARNESS	1		
13		87900	LATCH, COWL - PORT	1		
14		87899	LATCH, COWL - STARBOARD	1		
15	10	75710	SCREW, COWL LATCH	6		
16	12	22887	WASHER, COWL LATCH SCREW	6		
17	2149	7532A 2	COWL FRONT COVER ASSEMBL	1		
18		90984	BLANKET, SOUND - COWL FRC	1		
19		87907	HOOK, COWL FRONT COVER A	1		
20	10	75710	SCREW, HOOK TO COWL FRO	1		
21		47341A 1	STARTER ROPE ASSEMBLY	1	(FOR MANUAL STARTING)	

