



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	88656	STARTER MOTOR ASSEMBLY	1		
1	392	9129	BENDIX DRIVE	1		
2	392	9133	HOUSING ASSEMBLY, DRIVE E	1		
3	392	9134	BEARING	1		
4	392	9128	ARMATURE	1		
5	392	5730	THRUST WASHER PACKAGE	1		
6	392	9130	FIELD COIL	1		
7	392	5726	BRUSH PLATE	1		
8	392	5727	SPRING SET	1		
9	392	6181	BRUSH SET	1		
10	392	5728	TERMINAL STUD PACKAGE	1		
11	392	9131	HEAD, COMMUTATOR END	1		
12	392	9132	BEARING	1		
13	392	9136	THRU BOLT	1		
14	392	9135	PINION STOP PACKAGE	1		