



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1491	9225A 2	SWIVEL BRACKET ASSEMBLY	1	
2	26	87735	OIL SEAL, SWIVEL BRACKET (L)	1	
3	23	67669	BUSHING, SWIVEL BRACKET (L)	2	
4	25	33466	"O"RING, SWIVEL BRACKET (UP)	1	11
5	23	67668	SPACER, SWIVEL BRACKET (U)	1	
6	22	74036	FITTING, GREASE	4	
7	25	88341	GROMMET, SWIVEL BRACKET	2	
8	26	85023	OIL SEAL, SWIVEL BRACKET	2	
9	12	87161	WASHER, TILT LOCK LEVER	2	
10	25	48171	"O" RING, TILT LOCK LEVER	2	11
11		85030A 1	LEVER ASSEMBLY, TILT LOCK (F)	1	
11		85028A 1	LEVER ASSEMBLY, TILT LOCK (S)	1	
12	23	86600	BUSHING, TILT LEVER RELEASE	1	
13	24	85367	SPRING, TILT LEVER RELEASE	1	
14		41052	PLUNGER, TILT LEVER RELEASE	1	
15	16	88876	STUD, PLUNGER	1	
16		86603	KNOB, PLUNGER	1	
17		86475 1	COUPLING, TILT LOCK LEVER	1	
18	17	69745	ROLL PIN, LEVER TO COUPLING	2	
19	24	88049	SPRING, TENSION - COUPLING	1	
20	18	93861	COTTER PIN, COUPLING SPRING	1	
21	13	78854	WAVE WASHER, BOTTOM YOKE	1	
22		96852	BOTTOM YOKE	1	
23	53	67684	RETAINING RING, BOTTOM YOK	1	
24	12	67670	WASHER, THRUST - SWIVEL BR	1	
25	17	67706A 2	SWIVEL PIN AND STEERING ARM	1	
26	10	88659	SCREW, STEERING ARM TO UP	2	
27		77326	MOUNT, RUBBER (UPPER)	2	
28	12	66921	WASHER, UPPER MOUNT BOLT	2	
29	12	78688	WASHER, UPPER MOUNT BOLT	2	
30	11	34933	NUT, UPPER MOUNT BOLT	2	
31		88882	BUMPER, STEERING ARM	1	
32		92876A 1	STEERING LINK ASSEMBLY	1	
33	10	79401	SCREW, STEERING LINK TO STE	1	
34	11	33826	NUT, STEERING LINK SCREW	2	
35	12	34931	WASHER, STEERING LINK TO S	2	
36		86485A 5	TRIM SENDER ASSEMBLY	1	
37	84	65017A15	HARNESS, TRIM SENDER	1	
36		86485A 6	TILT SWITCH ASSEMBLY	1	
37	84	65017A14	HARNESS, TILT SWITCH	1	
38		88342	STRAP, SWITCH AND SENDER	2	