



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		88853A 6	FUEL PUMP ASSEMBLY	2		
2	21	30430A 8	CHECK VALVE ASSEMBLY	2		
3		89031A 2	DIAPHRAGM ASSEMBLY	2		11
4			GASKET, FUEL PUMP	2		11
5			GASKET, PULSE CHAMBER	2		11
6			GASKET, FUEL PUMP	4		11
7			GASKET, CHECK VALVE TO	4		11
8	35	59072	SCREEN, FUEL INLET	2		11
9	25	35480	"O"RING, FUEL INLET COVE	2		11
10			"O"RING, COVER SCREW	2		11
11		23004	RETAINER, CHECK VALVE	2		
12	10	43723	SCREW, RETAINER ATTACHIN	4		
13		67623	BASE, FUEL PUMP	2		
14		86449	CHAMBER, PULSE - FUEL PUM	2		
15	35	91078A 1	COVER, FUEL FILTER	2		
16	10	89766	SCREW, FUEL FILTER COVEF	2		
17	10	88447	SCREW, FUEL PUMP (1-1/2")	10		
18	13	26996	LOCKWASHER, FUEL PUMP SC	10		
19	24	86207	SPRING, COMPRESSION	2		
20		86026	RETAINER, SPRING	2		
21		86252	CAP, SPRING END	2		
22	21	42657A 1	CHECK VALVE ASSEMBLY	1		
23		90486	BRACKET, FUEL PUMP (STARBO	1		
23		90344	BRACKET, FUEL PUMP (PORT)	1		
24	10	40062152	SCREW, FUEL PUMP BRACKET	4		
25	22	64704	FITTING, FUEL LINE (90°)	5		
26	22	64705	FITTING, FUEL LINE (STRAIGHT)	1		
27	22	64706	FITTING, FUEL LINE (TEE)	3		
28	32	99127109	FUEL LINE (57")	1		
29	54	68424	CLAMP, FUEL LINE	11		
30	22	29085	FITTING, INLET FUEL LINE (45°)	1		
31	32	89020	FUEL LINE, INLET (6-3/4")	1		
32	22	63981	FITTING, CHECK UNIT ADAPTOR	1		
33		30186	ADAPTOR, CHECK UNIT	1		
34		30187	STEM, CHECK UNIT ADAPTOR	1		
35	25	20415	"O"RING, ADAPTOR STEM	1		11
36	24	30189	SPRING, ADAPTOR STEM	1		
37		30188	CUP WASHER, ADAPTOR	1		
38	10	76596	SCREW, ADAPTOR LOWER BRA	2		
--	27	88605A80	GASKET SET	--	CONTENTS INDICATED BY FOO	