



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		91882	PLATE, IGNITION	1		
2	10	40001140	SCREW, IGNITION PLATE	3		
3	13	26993	LOCKWASHER, IGNITION PLATE	3		
4	84	65999A 2	WIRE, GROUND (BLACK)	2		
5	54	47483	CLAMP, FUSE HOLDER - PLATE	1		
6	12	36042	WASHER, IGNITION PLATE SCRE	6		
7	12	67264	WASHER, IGNITION PLATE SCRE	6		
8	23	67268	BUSHING, IGNITION PLATE SCRI	3		
9	87	33386A 3	MERCURY SWITCH	1		
10	10	20646	SCREW, Mercury switch to ignit	1		
11	11	45076	NUT, MERCURY SWITCH TERMINI	1		
12	17	36242	ROLL PIN, MERCURY SWITCH	2		
13	86	66986	TERMINAL BLOCK, IGNITION PL	1		
14	10	69079	SCREW, TERMINAL BLOCK ATT	1		
15	10	37572	SCREW, LEADS TO TERMINAL B	1		
16	84	92432A 1	HARNES, ENGINE	1		
17	88	79091	FUSE	1		
18	84	95084A 2	WIRE ASSEMBLY, FUSE	1		
19		78799	TEMPERATURE SENDER	1		
20		89565	COVER, TEMPERATURE SENDEI	1		
21		88751	CLAMP, WIRING HARNESS	1		
22	10	28636	SCREW, CLAMP TO IGNITION PL	1		
23	12	20533	WASHER, CLAMP SCREW	1		
24		62351A 2	RECTIFIER	1		
25	10	20646	SCREW, RECTIFIER AND REGUL	1		
26	11	45076	NUT, RECTIFIER AND REGULATI	4		
27	84	88808A 4	WIRE, REGULATOR TO RECTIFI	1		
27	84	88809A 4	WIRE, REGULATOR TO RECTIFI	1		
28		88825A 7	VOLTAGE REGULATOR	1		
29	84	88439A14	BATTERY CABLE, POSITIVE	1		
29	84	88439A 2	BATTERY CABLE, NEGATIVE	1		
30	89	68258	STARTER SOLENOID	1		
31	10	20540	SCREW, SOLENOID TO IGNITION	2		
32	13	26992	LOCKWASHER, Solenoid to ignit	2		
33	84	93389A 2	WIRE, SOLENOID TO STARTER I	1		
34	13	39107	LOCKWASHER, SOLENOID TERM	2		
35	11	21908	NUT, SOLENOID TERMINALS (5/	2		
36	13	26996	LOCKWASHER, SOLENOID TERM	2		
37	11	68219	NUT, SOLENOID TERMINALS (10	2		
38	84	79139A15	WIRE, SOLENOID TO RECTIFIER	1		
39	84	92495A 1	HARNES, COIL TO SWITCH POS	1		