



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1659	9554A 3	GEAR HOUSING ASSEMBLY, COI	1		
-	1659	9554A 4	GEAR HOUSING ASSEMBLY, COI	1		
1		NLA	GEAR HOUSING ASSEMBLY	1		1,19,20,21
2	22	85822A 1	CONNECTOR ASSEMBLY, SP	1		
3		88375	INSERT, WATER (STARBOAF	1	EARLY MODELS	
4		88376	INSERT, WATER (PORT)	1	EARLY MODELS	
5	10	40043 76	SCREW, INSERT TO GEAR H	1	EARLY MODELS	
6	11	89019	NUT, INSERT TO GEAR HO:	1	EARLY MODELS	
7	17	20033	DOWEL PIN, GEAR HOUSING	2		
8	22	74036	GREASE FITTING, GEAR HOL	1		
9	23	89525	BUSHING, GEAR HOUSING	2		
10	26	54925	OIL SEAL, GEAR HOUSING	2		
11	31	88384	ROLLER BEARING, DRIVE SH	1		
11A	22	56800	PLUG, GEAR HOUSING	1		
12	45	14880T	DRIVE SHAFT ASSEMBLY (LON	1		
12	45	14881T	DRIVE SHAFT ASSEMBLY (EXT	1		
13		NLA	PINION GEAR	1		1,19,20,21
14	12	92721	WASHER, PINION GEAR NUT	1		
15	11	35921	NUT, PINION GEAR TO DRIVE	1		
16	15	88655A 1	SHIM ASSEMBLY, Roller bearing	AR		3
17	31	86748A 1	ROLLER BEARING, DRIVE SHA	1		
18	11	88710	LOCK NUT, ROLLER BEARING	1		
19	25	88657	"O"RING, WATER PUMP	1		11
20	46	88776A 1	WATER PUMP BASE ASSEMBL	1		
21	26	14381	OIL SEAL, WATER PUMP BASE	1		
22	27	90756 1	GASKET, LOWER - WATER PUI	1		11
23		90755	PLATE, FACE - WATER PUMP	1		
24	27	93666 1	GASKET, UPPER - WATER PUM	1		11
25	46	90530A 1	WATER PUMP BODY ASSEMBL	1		
26	26	88397	SEAL, RUBBER - WATER INLI	1		11
27		88581	GUIDE, WATER INLET TUBE	1		
28	47	85647	IMPELLER, WATER PUMP	1		
29	28	88422	KEY, IMPELLER DRIVE	1		
30	10	40011128	SCREW, WATER PUMP	4		
31		90753	INSULATOR, WATER PUMP SC	4		
32		44197A 2	SHAFT, SHIFT (LOWER)	1		
33	53	29641	"E"RING, RETAINING - SHIFT S	1		
34	53	78907	RETAINING RING	1		
35	25	25439	"O"RING, SHIFT SHAFT BUSHIN	1		11
36	23	77631A 2	BUSHING ASSEMBLY, SHIFT SI	1		
37	26	76384	OIL SEAL, SHIFT SHAFT BUSH	1		