



18520

					Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote	
1	1590	8343A 7	DRIVESHAFT HOUSIG ASSEMBL	1			
1	1590	8343A 8	DRIVESHAFT HOUSING ASSEMB	1			
2	16	56295	STUD, (.437 x 2.69), DRIVE SHA	2			
3		25067	BUMPER, LOWER MOUNT SCRE	2			
4	10	63474	SCREW, (.500-20 x 6.00), LOWER	2			
5		77327	MOUNT (LOWER)	2			
6	12	49339	WASHER, (.8125), LOWER MOUN	2			
7	11	25096	NUT, LOWER MOUNT SCREW	2			
8		88238A 1	WIRE ASSEMBLY, Ground	1			
9	54	67076	CLAMP, LOWER MOUNT	2			
10	10	66727	SCREW, (.312-18 x 1.250)	4			
11		67077	COVER, LOWER MOUNT CLAMP	2			
11		67077T 6	COVER, LOWER MOUNT CLAMP	2			
12	10	88417	SCREW, (#12-24 x .620), COVER /	4			
13	11	35521	NUT, NYLON - COVER TO CLAMP	4			
14		88238A 2	GROUND STRAP	1			
15	10	41508	SCREW, (.250-20 x .500), GROUND	1			
16	12	73862	WASHER, GEAR HOUSING STUC	1			
17	11	29489	NUT, GEAR HOUSING STUD (CAI	1			
18	12	45176	WASHER, (.453 x .812 x .105), GE	2			
19	11	34933	NUT, (.437-20), GEAR HOUSING	2			
20	19	64649	PLUG, DRIVE SHAFT HOUSING	1			
21		89743	EXHAUST TUBE	1			
22		66350	SEAL, EXHAUST TUBE (LOWER)	1			
23		86027	SEAL, EXHAUST TUBE (UPPER)	1			
24	32	67295	TUBE, WATER (LONG)	1			
25	27	99173	GASKET, DRIVE SHAFT HOUSING	1		2	
26		41945A 6	PLATE ASSEMBLY, DRIVE SHAF	1			
27		70748 2	SEAL, BRACKET	1			
28		68011	BRACKET, SEAL RETAINING	1			
29	10	48408	SCREW, (#10-16 x .500), BRACK	12			
30	17	20033	PIN, Dowel, LOCATING	2			
31	26	38970	SEAL, WATER TUBE	1		2	
32	10	90192	SCREW, (.250-20 x .750), DIFFU	6			
33	27	99177	GASKET, DRIVE SHAFT HOUSING	1		2	
34	12	25970	WASHER, POWERHEAD STUD	4			
35	11	69254	NUT, POWER HEAD STUD	4			
36		17303	DIFFUSER, EXHAUST	1			
37	27	78246	GASKET, EXHAUST DIFFUSER	1		2	
-	27	11338A88	GASKET SET, Engine Overhaul	1			