



18971

OIL INJECTION COMPONENTS

					Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote	
1		12430A	1 SENSOR ASSEMBLY	1			
2	10	48409	SCREW, (#10-16 x .625), SENSOF	1			
3		41470A	1 WARNING MODULE ASSEMBLY	1			
4	12	38833	WASHER, WARNING MODULE S	3			
5	10	69020	SCREW, (#10-32 x .875), WARNIN	3			
6		41032	OIL PUMP	1			
7	10	32228	SCREW, (#10-32 x .625), OIL PUM	1			
7	10	41507	SCREW, (#10-32 x 1.120), OIL PUI	1			
8		96255	6 LINK, THROTTLE LEVER TO OIL	1			
9	23	41429A	1 BEARING ASSEMBLY, DRIVE GE	1			
10	43	12726	DRIVEN GEAR	1			
11	32	43016	19 TUBING, OIL PUMP TO TEE	1			
12	25	11379	O-RING, OIL PUMP	1			
13	10	42813	SCREW, WARNING MODULE LEA	1			
14	1257	8742	1 TANK	1			
15	36	43298A	2 CAP ASSEMBLY, OIL TANK	1			
16	25	11332	O-RING, (2.225 x .210), CAP	1			
17		43295A	5 ADAPTOR HOUSING ASSEMBLY	1			
18	25	11332	O-RING, (2.225 x .210), ADAPTO	1			
19	32	99802	TUBE, OIL PICK-UP	1			
20		12540A	2 HOUSING ASSEMBLY	1			
21	32	99439	HOSE, (114.00 Inches), OIL	1			
22		12540A	3 HOUSING	1			
23		12242A	1 LATCH	1			
24		99443	OIL RESERVOIR	1			
25	10	69020	SCREW, (#10-32 x .875), OIL RES	3			
26	12	42118	WASHER, OIL RESERVOIR SCRE	6			
27	25	42117	GROMMET, OIL RESERVOIR SCF	3			
28	23	42116	BUSHING, OIL RESERVOIR SCRE	3			
29	32	43017	36 TUBING, OIL RESERVOIR TO OIL	1			
30	36	43300A	1 CAP ASSEMBLY, OIL RESERVOIF	1			
31	27	43307	GASKET, RESERVOIR CAP	1			
32		99022A	1 FLDAT ASSEMBLY	1			
33	11	99265	PUSHNUT	1			
34	54	41582	1 CLAMP, OIL HOSE (SMALL)	2			
35	54	41582	3 CLAMP, OIL HOSE (LARGE)	2			
36	32	991271	09 FUEL LINE, (57.00 Inches Bulk), O	1			
37	22	42425	TEE, OIL TUBING	1			
38	32	90729	25 HOSE, OIL (Cut to 6.75 Inches)	1			
39	32	34395A	1 HOSE	1			
40	21	43278	FITTING, CHECK VALVE (CRANK)	1			