



19582

				Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote	
1		12430A 4	SENSOR ASSEMBLY	1			
2	10	48409	SCREW, (#10-16 x .625), SENSO	1			
3		41470A15	WARNING MODULE ASSEMBLY	1			
4	12	38833	WASHER, WARNING MODULE S	3			
5	10	69020	SCREW, (#10-32 x .875)	3			
6		815698	OIL PUMP (135/150/MR4/MAGN)	1			
6		815699	OIL PUMP ASSEMBLY (200)	1			
7		814103 2	BUSHING, Worm	1			
8	25	11379	O-RING	1			
9	23	41429A 2	BEARING ASSEMBLY, DRIVE GE	1			
10	43	14563	DRIVEN GEAR	1			
12	10	42813	SCREW, WARNING MODULE LE	1			
13	10	32228	SCREW, (#10-32 x .625)	1			
13	10	41507	SCREW, (#10-32 x 1.120)	1			
14	1257	8742 1	TANK	1			
15	36	43298A 2	CAP ASSEMBLY, OIL TANK	1			
16	25	11332	O-RING, CAP	1			
17		43295A 5	ADAPTOR HOUSING ASSEMBLY	1	(Old Design)		
17		816190A 3	HOUSING ASSEMBLY, Adapter	1	(New Design)		
18	25	11332	O-RING, ADAPTOR HOUSING	1			
19	32	99802	TUBE, OIL PICK-UP	1			
20		NLA	No Longer Available, Quick Discon	1			
21	32	99439	HOSE, (114.00 Inches), OIL	1	(Old Design)		
21	32	99439	HOSE, (114.00 Inches)	1	(New Design)		
22		12540A 3	HOUSING	1	(Old Design)		
23		12242A 1	LATCH	1	(Old Design)		
24	21	43278	FITTING, CHECK VALVE (CRANK)	1			
25		99443 3	OIL RESERVOIR	1			
26	10	69020	SCREW, (#10-32 x .875), OIL RES	3			
27	12	42118	WASHER, OIL RESERVOIR SCRE	6			
28	25	42117	GROMMET, OIL RESERVOIR SCF	3			
29	23	42116	BUSHING, OIL RESERVOIR SCRE	3			
30	32	43017 36	TUBING, OIL RESERVOIR TO OIL	1			
31	36	43300A 9	CAP ASSEMBLY, OIL RESERVOIF	1			
32	27	43307	GASKET, RESERVOIR CAP	1			
33		99022A 1	FLOAT ASSEMBLY	1			
34	11	99265	PUSHNUT	1			
35	54	41582 4	CLAMP, OIL HOSE	2			
36	54	41582 3	CLAMP, OIL HOSE	2			
37	32	99127109	FUEL LINE, (57.00 Inches Bulk), O	1			
38	22	43425	TEE, OIL TUBING	1			