



18528

Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1655	9572A 3	GEAR HOUSING (LONG) (BLACK)	1	
-	1655	9572A 4	GEAR HOUSING (LONG) (GRAY)	1	
1	1655	9572A 1	GEAR HOUSING (BLACK)	1	
1	1655	9572A 2	GEAR HOUSING (GRAY)	1	
2	22	85822A 1	CONNECTOR ASSEMBLY, SP	1	
3	17	20033	PIN, Dowel, GEAR HOUSING I	2	
4	16	78638	STUD, (.438 x 3.12), GEAR HO	1	
5	16	57920	STUD, (.44 x 2.06), GEAR HOL	2	
6	16	56297	STUD, (.312 x 3.38), WATER F	1	
7	16	30667	STUD, (.250-20/ 250-28 x 3.12	2	
8	31	32898	BEARING, DRIVESHAFT	1	
9	10	79953	SCREW, (.375-16 x .250), GREAS	1	
10	22	67892	SCREW, Magnetic, DRAIN	1	
11	45	15298	DRIVESHAFT	1	
12		N. S. S.	Not Sold Seperate, Pinion Gear (F	1	
13	12	20260	WASHER, GREASE FILLER ANI	2	7,8
14	11	35921	NUT, (.625-18), PINION GEAR T	1	
15	15	42637A 1	SHIM SET, ROLLER BEARING I	AR	
16	31	36387A 1	BEARING, Roller, DRIVESHAFT	1	
17	11	42633	NUT, DRIVESHAFT BEARING	1	
18	46	42579A 3	WATER PUMP BASE ASSEMBL	1	7
19	27	42631	GASKET, WATER PUMP TO E	1	2,7,8
20	25	90011	O-RING, (2.175 x .175), WATER	1	2,7,8
20	25	38099	O-RING, WATER PUMP (2.10)	1	2,7,8
21	26	89238	OIL SEAL, WATER PUMP	1	7,8
22	26	16977	OIL SEAL, WATER PUMP	1	7,8
23	27	85608	GASKET, LOWER - WATER P	1	2,7,8
24	27	85609	GASKET, UPPER - WATER PL	1	2,7,8
25		32435	FACE PLATE, WATER PUMP	1	7
26	46	96148A 1	WATER PUMP BODY ASSEMBL	1	7
27		48752	INSERT, WATER PUMP BOD	1	7
28	26	38970	SEAL, RUBBER - WATER INLI	1	2,7,8
29	47	89984	IMPELLER, WATER PUMP	1	7
30	28	56654	KEY, IMPELLER DRIVE	1	7
31	10	96411	SCREW, (#14-8 x 2.25), WATER	1	
32	12	29245	WASHER, (.281 x .500 x .060), W	2	
33	11	13438	NUT, (.250-28), WATER PUMP S	2	
34	12	36001	WASHER, WATER PUMP STUC	1	
35	11	13436	NUT, WATER PUMP STUD	1	
36	25	30271	RING, RUBBER (DRIVESHAFT)	1	2,7,8
37	22	28804	SLEEVE GUIDE, WATER INLI	1	7