



22370

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		43429	PLATE, IGNITION	1	
2	332	7778A 6	SWITCH BOX	2	
3	10	13669	SCREW, (12-24 x 2.00), SWITCH	2	
4		13473 1	FUSE HOLDER	1	
5	23	94453	BUSHING, SWITCH BOX SCREW	2	
6	84	62310A 2	CABLE ASSEMBLY, SWITCH BOX	1	
7	11	45076	NUT, (#10-32), SWITCH BOX TER	20	
8	84	60871A10	WIRE ASSEMBLY, SWITCH BOX	2	
9	10	62568	SCREW, (#10-16 x .375), WIRE A1	2	
10	10	38055	SCREW, (.190-32 x .620), CABLE	1	
11	84	65999A 3	CABLE ASSEMBLY, (Black)	1	
12	10	69092	SCREW, (1.25), IGNITION PLATE	3	
13	13	26993	LOCKWASHER, (.312), IGNITION	3	
14	12	36042	WASHER, IGNITION PLATE SCRE	6	
15	12	67264	WASHER, (Rubber), IGNITION PL	6	
16	23	67268	BUSHING, IGNITION PLATE SCRI	3	
17		62351A 1	RECTIFIER	1	
18	10	38055	SCREW, (.190-32 x .620), RECTIFI	2	
19	11	45076	NUT, (#10-32), RECTIFIER TERMI	3	
20	87	33386A 3	SWITCH ASSEMBLY	1	
21	10	38055	SCREW, (.190-32 x .620), MERCUI	1	
22	11	45076	NUT, (#10-32), MERCURY SWITC	1	
23	10	87926	SCREW, (#10-32 x .500), LEAD AT	1	
24	84	88439A14	BATTERY CABLE, POSITIVE	1	
24	84	88439A 2	BATTERY CABLE, NEGATIVE	1	
25	84	96220A 4	HARNESS, ENGINE	1	
26	88	79091	FUSE, 20 Ampere	1	
27	84	95084A 2	CABLE ASSEMBLY, FUSE	1	
28		73498	CLAMP, HARNESS AND CABLES	AR	
29	89	15857	STARTER SOLENOID	1	10-32 5/16-18 TERMINALS
30	11	45076	NUT, (#10-32), SOLENOID TERMI	2	10-32 5/16-18 TERMINALS
31	13	53166	LOCKWASHER, (.312), SOLENOID	2	10-32 5/16-18 TERMINALS
32	11	68292	NUT, (.312-18), SOLENOID TERM	2	10-32 5/16-18 TERMINALS
33	10	31716	SCREW, (.250-20 x .62), SOLENOI	2	
34	13	26992	LOCKWASHER, (.250), SOLENOID	2	
35	84	65999A 2	CABLE ASSEMBLY, (Black), UPPE	1	
36	85	97861	INSULATOR, SOLENOID	1	
37		88825A 7	VOLTAGE REGUALTOR	1	
38	10	48409	SCREW, (#10-16 x .625), VOLTAG	2	
39	84	13397A 1	HARNESS ASSEMBLY	1	
40	11	45076	NUT, (#10-32), VOLTAGE REGUL	2	