



18520

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1590	8343A 7	DRIVESHAFT HOUSIG ASSEMBL	1		
1	1590	8343A 8	DRIVESHAFT HOUSING ASSEMB	1		
2	16	56295	STUD, (.437 x 2.69), DRIVE SHA	2		
3		25067	BUMPER, LOWER MOUNT SCRE	2		
4	10	63474	SCREW, (.500-20 x 6.00), LOWER	2		
5		77327	MOUNT, LOWER	2		
6	12	49339	WASHER, (.8125), LOWER MOUN	2		
7	11	25096	NUT, LOWER MOUNT SCREW	2		
8		88238A 1	WIRE ASSEMBLY, Ground	1		
9	54	67076	CLAMP, LOWER MOUNT	2		
10	10	66727	SCREW, (.312-18 x 1.250), LOWE	4		
11		67077	COVER, LOWER MOUNT CLAMP	2		
11		67077T 6	COVER, LOWER MOUNT CLAMP	2		
12	10	88417	SCREW, (#12-24 x .620), COVER	4		
13	11	35521	NUT, NYLON-COVER TO CLAMP	4		
14		88238A 2	GROUND STRAP	1		
15	10	41508	SCREW, (.250-20 x .500), GROUND	1		
16	12	73862	WASHER, GEAR HOUSING STUC	1		
17	11	29489	NUT, GEAR HOUSING STUD (CAI	1		
18	12	45176	WASHER, (.453 x .812 x .105), GE	1		
19	11	34933	NUT, (.437-20), GEAR HOUSING	2		
20	19	64649	PLUG, DRIVE SHAFT HOUSING	1		
21		89743	EXHAUST TUBE	1		
22		66350	SEAL, EXHAUST TUBE-LOWER	1		
23		86027	SEAL, EXHAUST TUBE-UPPER	1		
24	32	67295	TUBE, WATER	1		
25	27	99173 1	GASKET, DRIVE SHAFT HOUSING	1		2
26		41945A 7	PLATE ASSEMBLY, DRIVE SHAF	1		
27		18398 2	SEAL, BRACKET	1		
28		68011	BRACKET, SEAL RETAINING	1		
29	10	48408	SCREW, (#10-16 x .500), BRACK	12		
30	17	20033	PIN, Dowel, LOCATING	2		
31	26	38970	SEAL, WATER TUBE	1		2
32	10	90192	SCREW, (.250-20 x .750), DIFFU	6		
33	27	99177 1	GASKET, DRIVE SHAFT HOUSING	1		2
34	12	25970	WASHER, POWER HEAD STUD	4		
35	11	69254	NUT, POWER HEAD STUD	4		
36		17303	DIFFUSER, EXHAUST	1		
37	27	78246	GASKET, EXHAUST DIFFUSER	1		2
.	27	11338A88	GASKET SET, Engine Overhaul	1		