



18532

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		12430A 1	SENSOR ASSEMBLY	1		
2	10	48409	SCREW, (#10-16 x .625), SENSO	1		
3		41470A15	WARNING MODULE ASSEMBLY	1		
4	12	38833	WASHER, WARNING MODULE S	3		
5	10	69020	SCREW, (#10-32 x .875), WARNIN	3		
6		41032	OIL PUMP	1		
7	10	32228	SCREW, (#10-32 x .625), OIL PUM	1		
7	10	41507	SCREW, (#10-32 x 1.120), OIL PUI	1		
8		19385 6	LINK, THROTTLE LEVER TO OIL	1		
9	23	41429A 1	BEARING ASSEMBLY, DRIVE GE,	1		
10	43	12726	DRIVEN GEAR	1		
11	32	43016 19	TUBING, OIL PUMP TO TEE	1		
12	10	42813	SCREW, WARNING MODULE LE/	1		
13	25	11379	O-RING, OIL PUMP	1		
14	1257	8742 1	TANK	1		
15	36	43298A 2	CAP ASSEMBLY, OIL TANK	1		
16	25	11332	O-RING, (2.225 x .210), CAP	1		
17		43295A 5	ADAPTOR HOUSING ASSEMBLY	1		
18	25	11332	O-RING, (2.225 x .210), ADAPTO	1		
19	32	99802	TUBE, OIL PICK-UP	1		
20		12540A 2	HOUSING ASSEMBLY	1		
21	32	99439	HOSE, (114.00 Inches), OIL	1		
22		12540A 3	HOUSING	1		
23		12242A 1	LATCH	1		
24	21	43278	FITTING, CHECK VALVE (CRANK)	1		
25		99443	OIL RESERVOIR	1		
26	10	69020	SCREW, (#10-32 x .875), OIL RES	3		
27	12	42118	WASHER, OIL RESERVOIR SCRE	6		
28	25	42117	GROMMET, OIL RESERVOIR SCF	3		
29	23	42116	BUSHING, OIL RESERVOIR SCRE	3		
30	32	43017 36	TUBING, OIL RESERVOIR TO OIL	1		
31	36	43300A 1	CAP ASSEMBLY, OIL RESERVOIF	1		
32	27	43307	GASKET, RESERVOIR CAP	1		
33		99022A 1	FLOAT ASSEMBLY	1		
34	11	99265	PUSHNUT	1		
35	54	41582 1	CLAMP, OIL HOSE (SMALL)	2		
36	54	41582 3	CLAMP, OIL HOSE (LARGE)	2		
37	32	99127109	FUEL LINE, (57.00 Inches Bulk), O	1		
38	22	42425	TEE, OIL TUBING	1		
39	32	90729 25	HOSE, OIL (6-3/4")	1		
40	32	99127109	FUEL LINE, (57.00 Inches Bulk)	1		