



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42691	SHAFT, FLYWHEEL-USE WITH S1	1		
2	260	8908A 2	FLYWHEEL ASSEMBLY -USE WITH S1	1		
1A	11	818591	NUT-USE WITH NUT	1		
2	260	818540A 2	FLYWHEEL ASSEMBLY -USE WITH S1	1		
3		17794A 1	BEARING ASSEMBLY	1		5
4	26	818901	SEAL, MAIN BEARING	1		5
5	468	8471A 2	CRANKSHAFT ASSEMBLY	1		5
6		818630A 1	SLEEVE KIT	1		5
7	30	41341	BALL BEARING, CRANKSHAFT-LC	1		5
8	53	20940	SNAP RING, BALL BEARING(SMA)	1		5
9	53	42132	RETAINING RING, BALL BEARING	1		5
10	12	13031	WASHER, LOWER	1		5
11	26	12566 1	OIL SEAL, CRANKSHAFT-UPPER	1		5
12	28	20094	KEY, FLYWHEEL DRIVE	1		
13	31	41342	ROLLER BEARING, CRANKSHAFT	1		5
14	26	12567 1	OIL SEAL, CRANKSHAFT-LOWER	1		5
15	637	8477A 2	CONNECTING ROD ASSEMBLY	2		5
16	10	823460	SCREW, CONNECTING ROD	4		5
17	31	42076A 1	ROLLER BEARING ASSEMBLY	3		5
18	29	42186	NEEDLE BEARING, PISTON END	48		5
19		43348	THRUST BEARING	4		5
20	784	9747A 2	PISTON AND PIN ASSEMBLY (ST)	2		
20	784	9747A 4	PISTON AND PIN ASSEMBLY (.01)	2		
21	39	18212A 4	PISTON RING ASSEMBLY (STA)	1		5
21	39	18212A 1	PISTON RING ASSEMBLY (.015)	2		
22	40	42202	LOCK RING	4		5
23	12	824451	WASHER	1		