

| DESCRIPTION | SEE SEC. | NOTES |
|---|----------|-----------|
| Belt Guard | 35751 | D13B-E MH |
| Heat Exchanger with Installation Parts. HE. For wet exhaust | 36933 | D13B-E MH |
| Heat Exchanger with Installation Parts. HE. For dry exhaust | 37045 | D13B-E MH |
| Heat Exchanger with Installation Parts. Central Cooling | 36929 | D13B-E MH |
| Heat Exchanger, Components | 35773 | D13B-E MH |
| Expansion Tank | 36930 | D13B-E MH |
| Flexible Water Connection, Cooling Water | 9989 | D13B-E MH |
| Cooling Water Pump and Thermostat Housing | 36948 | D13B-E MH |
| Belt Transmission and Belt Tensioner Device | 36952 | D13B-E MH |
| After Cooler and Installation Components | 36928 | D13B-E MH |
| Charge Air Cooler Front | 36752 | D13B-E MH |
| Oil Cooler for Reverse Gear | 37131 | D13B-E MH |
| Oil Cooler for Reverse Gear, Components | 21709 | D13B-E MH |
| Sea Water Pump for Keel Cooling | 36935 | D13B-E MH |
| Coupling Flange for Seawater Pump | 36941 | D13B-E MH |
| Sea Water Pump for Keel Cooling, Components | 9909 | D13B-E MH |
| Sea Water Pump, Components | 4339 | D13B-E MH |
| Sea Water Pump for Heat Exchanger | 35811 | D13B-E MH |
| Sea Water Pump, Components | 35812 | D13B-E MH |
| Sea Water Filter | 36753 | D13B-E MH |
| Water Intake | 36945 | D13B-E MH |
| Hot Water Outlet | 37125 | D13B-E MH |
| Sea Water Filter | 5360 | D13B-E MH |