



10513

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	838701	1	Heat exchanger		REPLACED BY HEAT EXCHANGER 860275 AND AIR VENT HOSE 860229
			Bulletin 44-14	44-14-EN	Venting Pipe
1	860275	1	Heat exchanger		
2	860119	1	· Cover		(858752)
2A	860127	3	· Sealing strip		
3	925027	1	· O-ring		
4	964106	1	· Gasket		
5	963567	1	· Screw		
6	192134	1	· Plug		
7	838929	1	· Zinc anod		
8	958227	1	· O-ring		
9	858754	1	· Anchorage		
9A	960629	1	· Plug		INCLUDED IN 860275
9B	11994	1	· Gasket		INCLUDED IN 860275
10	838729	1	Bracket		
11	838733	2	Support ring		
12	838728	1	Bracket		
13	965185	3	Flange screw		
14	838738	1	Tube		HEAT EXCHANGER-CIRCULATION PUMP.
15	968927	4	O-ring		
16	838797	1	Coolant pipe		HEAT EXCHANGER-THERMOSTAT HOUSING.
17	967645	1	Clamp		
18	946544	1	Flange screw		
19	845879	1	Cover		
20	192618	X	Hose		L = 700 MM
21	953003	1	Stud, STUD BOLT		L = 130 MM
				02B-2270	
21	953007	1	Stud, STUD BOLT		L = 150 MM
				02B-2270	
22	941908	2	Spring washer		
23	971095	2	Nut		(945409)
24	838744	1	Tube	02B-2035	
			Bulletin 44-14	44-14-EN	Venting Pipe
24					REPLACED BY AIR VENT HOSE 860229, 1EA PLUG 960629 AND 1EA GASKET 11994
24A	860229	1	Air vent hose		TURBO-HEAT EXCHANGER-THERMOSTAT HOUSING
24B	11994	2	Gasket		
24C	969299	1	Hollow screw		
25	969299	1	Hollow screw		(74040)
26	11994	2	Gasket		
27	838779	1	Coolant pipe		AFTER COOLER-HEAT EXCHANGER
28	943475	2	Hose clamp		
29	944386	1	Hose		
32	838862	1	Coolant pipe		HEAT EXCHANGER-EXHAUST PIPE.
33	943475	2	Hose clamp		
34	944386	1	Hose		
35	969299	1	Hollow screw		(74040)
36	11994	2	Gasket		ONLY WHEN PIPE 838744 IS USED
37	945417	1	Nipple		ONLY WHEN PIPE 838744 IS USED
38	954356	1	Cap nut		ONLY WHEN PIPE 838744 IS USED
39	954364	1	Fitting		ONLY WHEN PIPE 838744 IS USED
40	944717	1	Sleeve		ONLY WHEN PIPE 838744 IS USED

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
41	945460	1	Plastic pipe		ONLY WHEN PIPE 838744 IS USED
42	858889	1	Decal		REPLACED BY DECAL KIT 876234
	876234	1	Decal set		