



9488

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	853398	1	Reversing gear COMPONENTS	RATIO 1,93:1 SEE GROUP 4B
	853399	1	Reversing gear COMPONENTS	RATIO 2,63:1 SEE GROUP 4B
	853870	1	Reversing gear	RATIO 1,54:1 REPL BY 853397
	853397	1	Reversing gear COMPONENTS	RATIO 1,54:1 SEE GROUP 4B
	854902	1	Reversing gear COMPONENTS	RATIO 1,93:1 SEE GROUP 4B
	854903	1	Reversing gear COMPONENTS	RATIO 2,63:1 SEE GROUP 4B
	854900	1	Reversing gear COMPONENTS	RATIO 1,54:1 SEE GROUP 4B
2	946752	6	Flange screw	
3	941908	6	Spring washer	
4	860278	1	Coolant pipe	(838818). REVERSE GEAR-HEAT EXCHANGER.
5	838816	1	Coolant pipe	AFTER COOLER-REVERSE GEAR.. REPLACED BY PIPE 860279, PIPE 860280 AND INSTALLATION KIT 859588.
6	842913	2	Sealing ring	
7	946544	4	Flange screw	
8	858986	1	Sealing ring	(842744)
9	947827	1	Clamp	
10		2	SCREW	SEE GROUP 2A
11	858587	1	Bracket	
12	952635	1	Clamp	
13	947542	1	Screw	
14	945407	1	Flange nut	
15	944386	1	Hose	
16	943475	2	Hose clamp	
17	860279	1	Coolant pipe	(859585). AFTER COOLER-REVERSE GEAR.
18	860280	1	Coolant pipe	(859586)
19	859588	1	Mounting kit	
20	944386	1	· Hose	L = 80 MM
21	943475	2	· Hose clamp	