
04A

PENTA

## FLEXIBLE COUPLING: MD100B

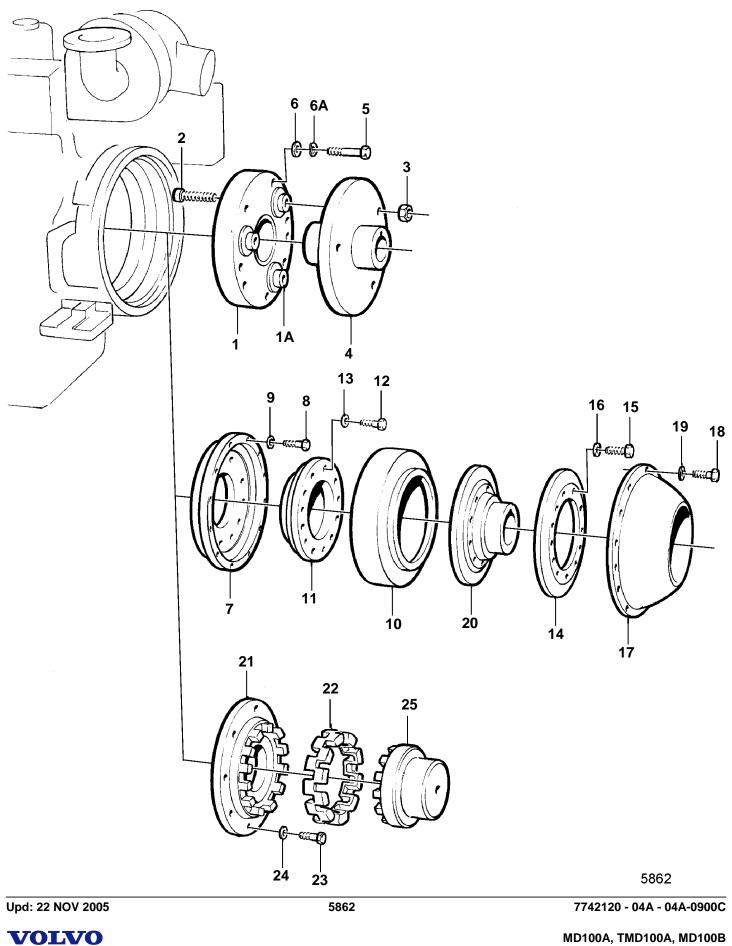

MD100A, TMD100A, MD100B

## FLEXIBLE COUPLING: MD100B

REF         F           1         1           1A         2           3         -           4         -           5         -           6         -           6A         -           7         -           8         -           9         -           10         -           11         -           12         -           13         -           14         -           15         -           16         -           17         -           18         -           19         -           20         -           21         -           22         -           23         -           24         -           25         -	PART NO. 823358 845913 824471 824472 823382 955541 942336 940097 896751 955562 940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909 899953	$ \begin{array}{c} 1\\ 3\\ 3\\ -\\ -\\ -\\ -\\ -\\ -\\ -\\ -\\ -\\ -\\ -\\ -\\ -\\$	DESCRIPTION Clutch Rubber element Screw Lock nut Clutch half Screw Spring washer Washer Companion flange Screw Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	EARLY TYF EARLY TYF EARLY TYF I.D = 38 MM EARLY TYF EARLY TYF	BOLTS. BOLTS. BOLTS. BOLTS.
1A         2         3         4         5         6         6A         7         8         9         10         11         12         13         14         15         16         17         18         19         20         21         22         23         24	845913 824471 824472 823382 955541 942336 940097 896751 955562 940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	$ \begin{array}{c} 3\\3\\3\\1\\6\\6\\6\\1\\1\\1\\2\\12\\12\\12\\12\\12\\12\\2\end{array} $	Rubber element Screw Lock nut Clutch half Screw Spring washer Washer Companion flange Screw Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	EARLY TYF EARLY TYF EARLY TYF I.D = 38 MM EARLY TYF FOR BEAR FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E	PE. FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. M. FOR TRANSPORT FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. RING PIN WITH 2 BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS.
2       3         4       5         6       6         6A       7         8       9         10       11         12       13         14       15         16       17         18       19         20       21         22       23         24       24	824471 824472 823382 955541 942336 940097 896751 955562 940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	$     \begin{array}{r}       3 \\       3 \\       1 \\       6 \\       6 \\       6 \\       6 \\       1 \\       1 \\       8 \\       8 \\       1 \\       1 \\       12 \\       12 \\       12 \\       12 \\       12 \\       2 \\       2     \end{array} $	Screw Lock nut Clutch half Screw Spring washer Washer Companion flange Screw Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	EARLY TYF EARLY TYF I.D = 38 MM EARLY TYF FOR BEAR FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E	PE. FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. M. FOR TRANSPORT FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. RING PIN WITH 2 BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS.
3     4       5     6       6A     7       8     9       10     11       12     13       14     15       16     17       18     19       20     21       22     23       24     24	824472 823382 955541 942336 940097 896751 955562 940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	3 1 6 6 6 1 1 8 8 8 1 1 1 2 12 12 12 12 12 2	Lock nut Clutch half Screw Spring washer Washer Companion flange Screw Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	EARLY TYF I.D = 38 MM EARLY TYF FOR BEAR FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E	PE. FOR BEARING PIN WITH 2 BOLTS. M. FOR TRANSPORT FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. RING PIN WITH 2 BOLTS. 30LTS. 30LTS. 30LTS. 30LTS. 30LTS. 30LTS.
4       5       6A       7       8       9       10       11       12       13       14       15       16       17       18       19       20       21       22       23       24	823382 955541 942336 940097 896751 955562 940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	$ \begin{array}{c} 1\\ 6\\ 6\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\$	Clutch half Screw Spring washer Washer Companion flange Screw Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	I.D = 38 MM           EARLY TYF           EARLY TYF           FOR BEAR           FOR M18 E           FOR M18 E	M. FOR TRANSPORT FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. RING PIN WITH 2 BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS.
5         6           6A         7           8         9           10         11           12         13           14         15           16         17           18         19           20         21           22         23           24         24	955541 942336 940097 896751 955562 940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	6 6 1 8 8 1 1 12 12 12 12 12 12 12 2	Screw Spring washer Washer Companion flange Screw Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	EARLY TYF EARLY TYF FOR BEAR FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E	PE. FOR BEARING PIN WITH 2 BOLTS. PE. FOR BEARING PIN WITH 2 BOLTS. RING PIN WITH 2 BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS.
6           6A           7           8           9           10           11           12           13           14           15           16           17           18           19           20           21           22           23           24	942336 940097 896751 955562 940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	6 6 1 8 8 1 12 12 12 12 12 12 12 2	Spring washer Washer Companion flange Screw Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	EARLY TYF FOR BEAR FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E	PE. FOR BEARING PIN WITH 2 BOLTS. RING PIN WITH 2 BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS.
6A           7           8           9           10           11           12           13           14           15           16           17           18           19           20           21           22           23           24	940097 896751 955562 940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	6 1 8 8 1 1 12 12 12 12 12 12 12 2	Washer Companion flange Screw Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	FOR BEAR           FOR M18 E	RING PIN WITH 2 BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS.
7     8       9     10       11     12       13     14       15     16       17     18       19     20       21     22       23     24	896751 955562 940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	1 8 8 1 1 12 12 12 12 12 12 12 2	Companion flange Screw Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E	BOLTS. BOLTS. BOLTS. BOLTS. BOLTS. BOLTS.
8         9           10         11           12         13           14         15           16         17           18         19           20         21           22         23           24         24	955562 940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	8 8 1 12 12 12 12 12 12 12 2	Screw Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E	BOLTS. BOLTS. BOLTS. BOLTS.
9           10           11           12           13           14           15           16           17           18           19           20           21           22           23           24	940280 807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	8 1 12 12 12 12 12 12 12 2	Spring washer Rubber element Clamping ring Screw Lock washer Clamping ring Screw	FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E FOR M18 E	BOLTS. BOLTS. BOLTS.
10           11           12           13           14           15           16           17           18           19           20           21           22           23           24	807666 801663 190522 940143 807674 955366 941912 898425 940134 941909	1 12 12 1 1 12 12 12 2	Rubber element Clamping ring Screw Lock washer Clamping ring Screw	FOR M18 E FOR M18 E FOR M18 E FOR M18 E	BOLTS. BOLTS.
11       12       13       14       15       16       17       18       19       20       21       22       23       24	801663 190522 940143 807674 955366 941912 898425 940134 941909	1 12 12 1 1 12 12 12 2	Clamping ring Screw Lock washer Clamping ring Screw	FOR M18 E FOR M18 E FOR M18 E	BOLTS.
13       14       15       16       17       18       19       20       21       22       23       24	190522 940143 807674 955366 941912 898425 940134 941909	12 1 12 12 2	Screw Lock washer Clamping ring Screw	FOR M18 E FOR M18 E	
14       15       16       17       18       19       20       21       22       23       24	807674 955366 941912 898425 940134 941909	1 12 12 2	Clamping ring Screw		
15       16       17       18       19       20       21       22       23       24	955366 941912 898425 940134 941909	12 12 2	Screw	FOR M18 F	BOLTS.
15       16       17       18       19       20       21       22       23       24	941912 898425 940134 941909	12 2	Screw		BOLTS.
17       18       19       20       21       22       23       24	898425 940134 941909	2		FOR M18 E	BOLTS.
17       18       19       20       21       22       23       24	898425 940134 941909	2		FOR M18 E	BOLTS.
18       19       20       21       22       23       24	940134 941909		Protecting casing	FOR M18 E	
20 21 22 23 24	941909		Screw	FOR M18 E	
21 22 23 24	899953	12	Spring washer	FOR M18 E	
22 23 24		1	Clutch flange	FOR M18 E	
23 24		1	COUPLING FLANGE	LATE TYPE	
23 24	845618	1	Flange	LATE TYPE	
24	845617	1	<ul> <li>Rubber element</li> </ul>	LATE TYPE	
24 25	960691	8	Screw	LATE TYPE	
25	840210		Washer	LATE TYPE	
	845616	1	Clutch half	I.D = 39 MN	M. FOR TRANSPORT.

**04A** 



