



5861

| REF | PART NO. | QTY | DESCRIPTION | NOTES |
|-----|----------|-----|----------------------|------------------------|
| 1 | 829907 | 1 | Injector | |
| | 3803229 | 1 | Injector, exch, exch | |
| 2 | | 1 | • NOZZLE HOLDER BODY | |
| 3 | 844299 | X | • Adjusting washer | TH = 1.000mm |
| | 846960 | X | • Adjusting washer | (844300) TH = 1,025 MM |
| | 846945 | X | • Adjusting washer | (844301) TH = 1,050 MM |
| | 846961 | X | • Adjusting washer | (844302) TH = 1,075 MM |
| | 844303 | X | • Adjusting washer | TH = 1,100mm |
| | 844341 | X | • Adjusting washer | TH = 1.125mm |
| | 846947 | X | • Adjusting washer | TH = 1.150mm |
| | 844343 | X | • Adjusting washer | TH = 1.175mm |
| | 844304 | X | • Adjusting washer | TH = 1,200 MM |
| | 844305 | X | • Adjusting washer | TH = 1,225 MM |
| | 846948 | X | • Adjusting washer | TH = 1,250 MM |
| | 844307 | X | • Adjusting washer | TH = 1,275 MM |
| | 844308 | X | • Adjusting washer | TH = 1,300 MM |
| | 846965 | X | • Adjusting washer | TH = 1,325 MM |
| | 846950 | X | • Adjusting washer | (844310) TH = 1,350 MM |
| | 844311 | X | • Adjusting washer | TH = 1,375 MM |
| | 844312 | X | • Adjusting washer | TH = 1,400 MM |
| | 6212393 | X | • Adjusting washer | TH = 1,425 MM |
| | 846952 | X | • Adjusting washer | TH = 1,450 MM |
| | 844315 | X | • Adjusting washer | TH = 1,475 MM |
| | 844316 | X | • Adjusting washer | TH = 1,500 MM |
| | 844317 | X | • Adjusting washer | TH = 1,525 MM |
| | 844318 | X | • Adjusting washer | TH = 1,550 MM |
| | 844319 | X | • Adjusting washer | TH = 1,575 MM |
| | 844320 | X | • Adjusting washer | TH = 1,600 MM |
| | 846970 | X | • Adjusting washer | TH = 1,625 MM |
| | 844322 | X | • Adjusting washer | TH = 1,650 MM |
| | 844323 | X | • Adjusting washer | TH = 1,675 MM |
| | 844324 | X | • Adjusting washer | TH = 1,700 MM |
| | 844325 | X | • Adjusting washer | TH = 1,725 MM |
| | 846957 | X | • Adjusting washer | TH = 1,750 MM |
| | 844327 | X | • Adjusting washer | TH = 1,775 MM |
| | 844328 | X | • Adjusting washer | TH = 1,800 MM |
| | 844329 | X | • Adjusting washer | TH = 1,825 MM |
| | 846958 | X | • Adjusting washer | (844330) TH = 1,850 MM |
| | 844331 | X | • Adjusting washer | TH = 1,875 MM |
| | 844332 | X | • Adjusting washer | TH = 1,900 MM |
| | 844333 | X | • Adjusting washer | TH = 1,925 MM |
| | 846959 | X | • Adjusting washer | TH = 1,950 MM |
| | 846980 | X | • Adjusting washer | (844335) TH = 1,975 MM |
| 4 | 846290 | 1 | • Spring | OBSOLETE PART |
| 5 | 846291 | 1 | • Push rod | OBSOLETE PART |
| 6 | 846292 | 1 | • Washer | OBSOLETE PART |
| 7 | 844339 | 2 | • Locating pin | |
| 8 | 846293 | 2 | • Pin | |
| 9 | 829909 | 1 | • Nozzle | |
| 10 | 846294 | 1 | • Spray sleeve | |
| 11 | 190990 | 2 | • Gasket | |
| 12 | 243487 | 1 | • Hollow screw | |