


D4-180I-B, D4-180I-C, D4-180I-D, D4-180I-E, D4-210A-A, D4-210A-B, D4-210I-A, D4-210I-B, D4-225A-B, D4-225A-C, D4-225A-D, D4-225I-B, D4-225I-C, D4-225I-D, D4-260A-A, D4-260A-B, D4-260A-C, D4-260A-D, D4-260D-B, D4-260D-C, D4-260D-D, D4-260I-A, D4-260I-B, D4-260I-C, D4-260I-D, D4-300A-A, D4-300A-C, D4-300A-D, D4-300D-A, D4-300D-C, D4-300I-A, D4-300I-C, D4-300I-D, D4-225A-E, D4-225I-E, D4-260A-E, D4-260D-E, D4-260I-E, D4-300A-E, D4-300D-E, D4-300D-D, D4-300I-E

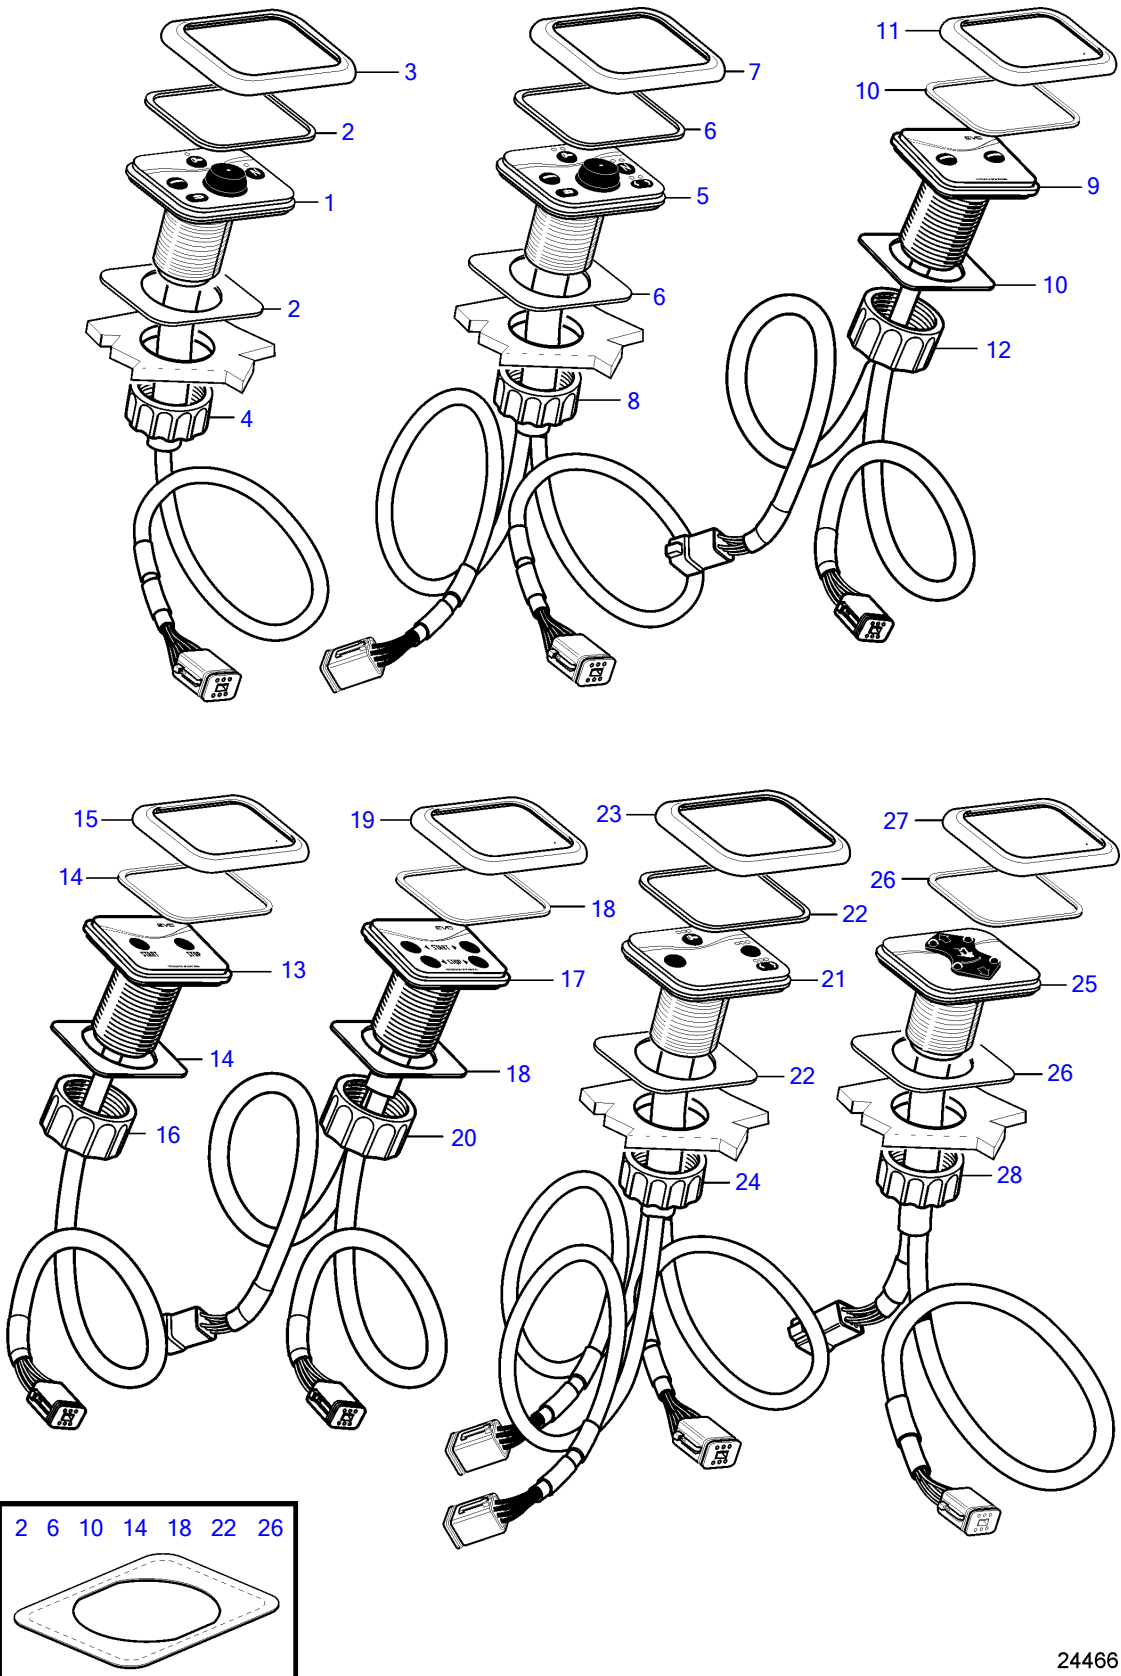

24466

D4-180I-B, D4-180I-C, D4-180I-D, D4-180I-E, D4-210A-A, D4-210A-B, D4-210I-A, D4-210I-B, D4-225A-B, D4-225A-C, D4-225A-D, D4-225I-B, D4-225I-C, D4-225I-D, D4-260A-A, D4-260A-B, D4-260A-C, D4-260A-D, D4-260D-B, D4-260D-C, D4-260D-D, D4-260I-A, D4-260I-B, D4-260I-C, D4-260I-D, D4-300A-A, D4-300A-C, D4-300A-D, D4-300D-A, D4-300D-C, D4-300I-A, D4-300I-C, D4-300I-D, D4-225A-E, D4-225I-E, D4-260A-E, D4-260D-E, D4-260I-E, D4-300A-E, D4-300D-E, D4-300D-D, D4-300I-E

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	21310162	1	Control panel	Single installation
2	3808135	1	• Gasket	Also for flushmounting.
3	3808131	1	• Frame	
4	3808134	1	• Nut	
5	21310164	1	Control panel	Twin installation
6	3808135	1	• Gasket	Also for flushmounting.
7	3808131	1	• Frame	
8	3808134	1	• Nut	
9	21144011	1	Control panel	Sportfish
10	3808135	1	• Gasket	Also for flushmounting.
11	3808131	1	• Frame	
12	3808134	1	• Nut	
13	40005641		Control panel, start/stop	Single installation, Dual station
14	3808135	1	• Gasket	Also for flushmounting.
15	3808131	1	• Frame	
16	3808134	1	• Nut	
17	40005642	1	Control panel, start/stop	Twin installation, Dual station
18	3808135	1	• Gasket	Also for flushmounting.
19	3808131	1	• Frame	
20	3808134	1	• Nut	
21	3594954	1	Kit, start/stop	Triple installation.
22	3808135	1	• Gasket	
23	3808131	1	• Frame	
24	3808134	1	• Nut	
25	40005634	1	Control panel	Power trim
26	3808135	1	• Gasket	Also for flushmounting.
27	3808131	1	• Frame	
28	3808134	1	• Nut	