



6755

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	846222	1	Injection pump		
2	844970	1	· Governor		
				02C-0600	
3	244391	1	· Feed pump		
				02C-0650	
4	239896	1	· Gasket		
5	130673	3	· Stud		
6	940197	3	· Nut		
7	941906	3	· Spring washer		
8		1	· HOUSING		
9	244404	6	· Push rod		
10	240779	6	· · Bolt		(846578)
11	240780	6	· · Bushing		
12	846577	6	· · Bearing		
13	238379	6	· · Plate		
14	244685	6	· Spring disc		
15		6	· SPRING		
16	239984	6	· Spring disc		
17		6	· CONTROL SLEEVE		
18	239991	6	· Cover		
19	241677	6	· Washer		
20	844990	X	· Adjusting washer		TH = 0.40 MM
	844991	X	· Adjusting washer		TH = 0.50 MM
	844992	X	· Adjusting washer		TH = 0.70 MM
	844993	X	· Adjusting washer		TH = 0.80 MM
	844994	X	· Adjusting washer		TH = 1.00 MM
	844995	X	· Adjusting washer		TH = 1.10 MM
	844996	X	· Adjusting washer		TH = 1.25 MM
	244634	X	· Adjusting washer		TH = 1.30 MM
	244635	X	· Adjusting washer		TH = 1.40 MM
	244381	X	· Adjusting washer		TH = 1.50 MM
	244382	X	· Adjusting washer		TH = 1.60 MM
	244383	X	· Adjusting washer		TH = 1.70 MM
	244384	X	· Adjusting washer		TH = 1.80 MM
	244385	X	· Adjusting washer		TH = 1.90 MM
	244386	X	· Adjusting washer		TH = 2.00 MM
	847433	X	· Adjusting washer		TH = 2.10 MM
21	244733	6	· Sleeve		
22	18836	6	· Gasket		
23	240422	12	· O-ring		
24	244401	6	· Pump element		
25	240783	6	· Delivery valve		
26	239993	6	· Gasket		
27	240969	6	· Spring		
28	240001	6	· Gasket		
29	244636	6	· Delivery valve retai		
30	243743	12	· Washer		
31	244380	12	· Stud		
32	943927	12	· Nut		
33	941908	12	· Spring washer		
34	240907	1	· Control rod		
35	240014	2	· Guide sleeve		
36	244008	1	· Lock pin		
37	240971	6	· Plug		
38	240972	X	· Washer		TH = 0.2 MM
	240973	X	· Washer		TH = 0.5 MM
39	180707	6	· Plug		
40	243263	1	· Plug		
41	240017	1	· Gasket		
42	845454	1	· Camshaft		
43	244406	1	· Bearing		
44	240427	2	· Screw		
45	941906	2	· Spring washer		
46	240023	1	· Roller bearing		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
47	240022	1	· Sealing ring		
48	243299	1	· O-ring		
49	240024	X	· Adjusting washer		TH = 0.10 MM
	240025	X	· Adjusting washer		TH = 0.12 MM
	240026	X	· Adjusting washer		TH = 0.14 MM
	240027	X	· Adjusting washer		TH = 0.16 MM
	240028	X	· Adjusting washer		TH = 0.18 MM
	240029	X	· Adjusting washer		TH = 0.30 MM
	240030	X	· Adjusting washer		TH = 0.50 MM
50		1	· COVER		
51		4	· SCREW		
52	941906	4	· Spring washer		
53		1	· BUSHING		
54	955806	1	· Nut		
55	941913	1	· Spring washer		
56	35168	1	· Key		
57	240023	1	· Roller bearing		
58	240032	1	· Ring		
59	240033	X	· Adjusting washer		TH = 1.2 MM
	240034	X	· Adjusting washer		TH = 1.5 MM
	240035	X	· Adjusting washer		TH = 1.8 MM
	240036	X	· Adjusting washer		TH = 2.0 MM
60	240947	1	· Cover		
61	240948	1	· Gasket		
62		12	· SCREW		
63	241647	1	· Setting indicator		
64	956092	2	· Screw		
	6642955	1	· Screw		
65	941906	2	· Spring washer		
	947620	1	· Gasket		
66	239990	6	· Lock ring		(243668)
67		6	· RING		