



6297

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	846682	1	Injection pump		
2	846377	1	· Actuator		SEE GROUP 2D
			· INSTALLATION COMPONENTS		
3	243083	1	· Feed pump		
				02C-0650	
4		1	· PUMP HOUSING		
5	244404	6	· Push rod		
6	240779	6	· · Bolt		(846578)
7	240780	6	· · Bushing		
8	846577	6	· · Bearing		
9	238739	6			
10		6	· DISC		
11	244402	6	· Compression spring		
12	239984	6	· Spring disc		
13	240782	6	· Control sleeve		
14	239991	6	· Cover		
15	844988	1	· Plug		
16	239990	6	· Lock ring		(243668)
17	241677	6	· Washer		
18	846937	6	· O-ring		
19	844990	X	· Adjusting washer		TH = 0.4 MM
	844991	X	· Adjusting washer		TH = 0.50 MM
	844992	X	· Adjusting washer		TH = 0.70 MM
	844993	X	· Adjusting washer		TH = 0.80 MM
	844994	X	· Adjusting washer		TH = 1.00 MM
	844995	X	· Adjusting washer		TH = 1.10 MM
	244633	X	· Adjusting washer		TH = 1.20 MM
	844996	X	· Adjusting washer		TH = 1.25 MM
	244634	X	· Adjusting washer		TH = 1.30 MM
	244635	X	· Adjusting washer		TH = 1.40 MM
	244381	X	· Adjusting washer		TH = 1.50 MM
	244382	X	· Adjusting washer		TH = 1.60 MM
	244383	X	· Adjusting washer		TH = 1.70 MM
	244384	X	· Adjusting washer		TH = 1.80 MM
	244385	X	· Adjusting washer		TH = 1.90 MM
	244386	X	· Adjusting washer		TH = 2.00 MM
20	244407	6	· Bushing		
21	18836	6	· Gasket		
22	240422	12	· O-ring		
23	846576	6	· Pump element		
24	846188	6	· Delivery valve		
25	239993	6	· Gasket		
26	240969	6	· Spring		
27	240001	6	· Gasket		
28	244636	6	· Delivery valve retai		
29	243743	12	· Washer		
30	244380	12	· Stud		
31	941908	12	· Spring washer		
32	943927	12	· Nut		
33	240011	1	· Cover		
34	956209	2	· Screw		
35	18891	2	· Lock washer		
36	240907	1	· Control rod		
37	240014	2	· Guide sleeve		
38	244008	1	· Lock pin		
39	846938	1	· Bushing		
40	6642955	1	· Screw		
41	947620	1	· Gasket		
42	130673	3	· Stud		
43	240971	6	· Plug		
44	240972	X	· Washer		TH = 0.2 MM
	240973	X	· Washer		TH = 0.5 MM
45	180707	1	· Plug		
46	243263	1	· Plug		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
47	240017	1	· Gasket		
48	845454	1	· Camshaft		
49	244406	1	· Bearing		
50	240427	2	· Screw		
51	941906	2	· Spring washer		
52	240023	1	· Roller bearing		
53	240022	1	· Sealing ring		
54	243299	1	· O-ring		
55	240024	X	· Adjusting washer		TH = 0.10 MM
	240025	X	· Adjusting washer		TH = 0.12 MM
	240026	X	· Adjusting washer		TH = 0.14 MM
	240027	X	· Adjusting washer		TH = 0.16 MM
	240028	X	· Adjusting washer		TH = 0.18 MM
	240029	X	· Adjusting washer		TH = 0.30 MM
	240030	X	· Adjusting washer		TH = 0.50 MM
56	240021	1	· Cover		
57	956094	4	· Screw		(243714)
58	941906	4	· Spring washer		
59	955806	1	· Nut		
60	955927	1	· Spring washer		
61	35168	1	· Key		
62	240023	1	· Roller bearing		
63	240032	1	· Ring		
64	240033	X	· Adjusting washer		TH = 1.2 MM
	240034	X	· Adjusting washer		TH = 1.5 MM
	240035	X	· Adjusting washer		TH = 1.8 MM
	240036	X	· Adjusting washer		TH = 2.0 MM
65	240947	1	· Cover		
66	240948	1	· Gasket		
67	956205	12	· Screw		
68	6212117	1	· Plate		
69	940197	3	· Nut		
70	941906	3	· Spring washer		
71	240811	1	· Sealing ring		
72	240812	1	· Cover		
73	240037	1	· Gasket		
74	6638096	4	· Screw		
75	240121	1	· Plug		
76	240016	1	· Protecting casing		
77	240017	1	· Gasket		