


4.3GIPWTC, 4.3GIPWTR, 4.3GIJWTR

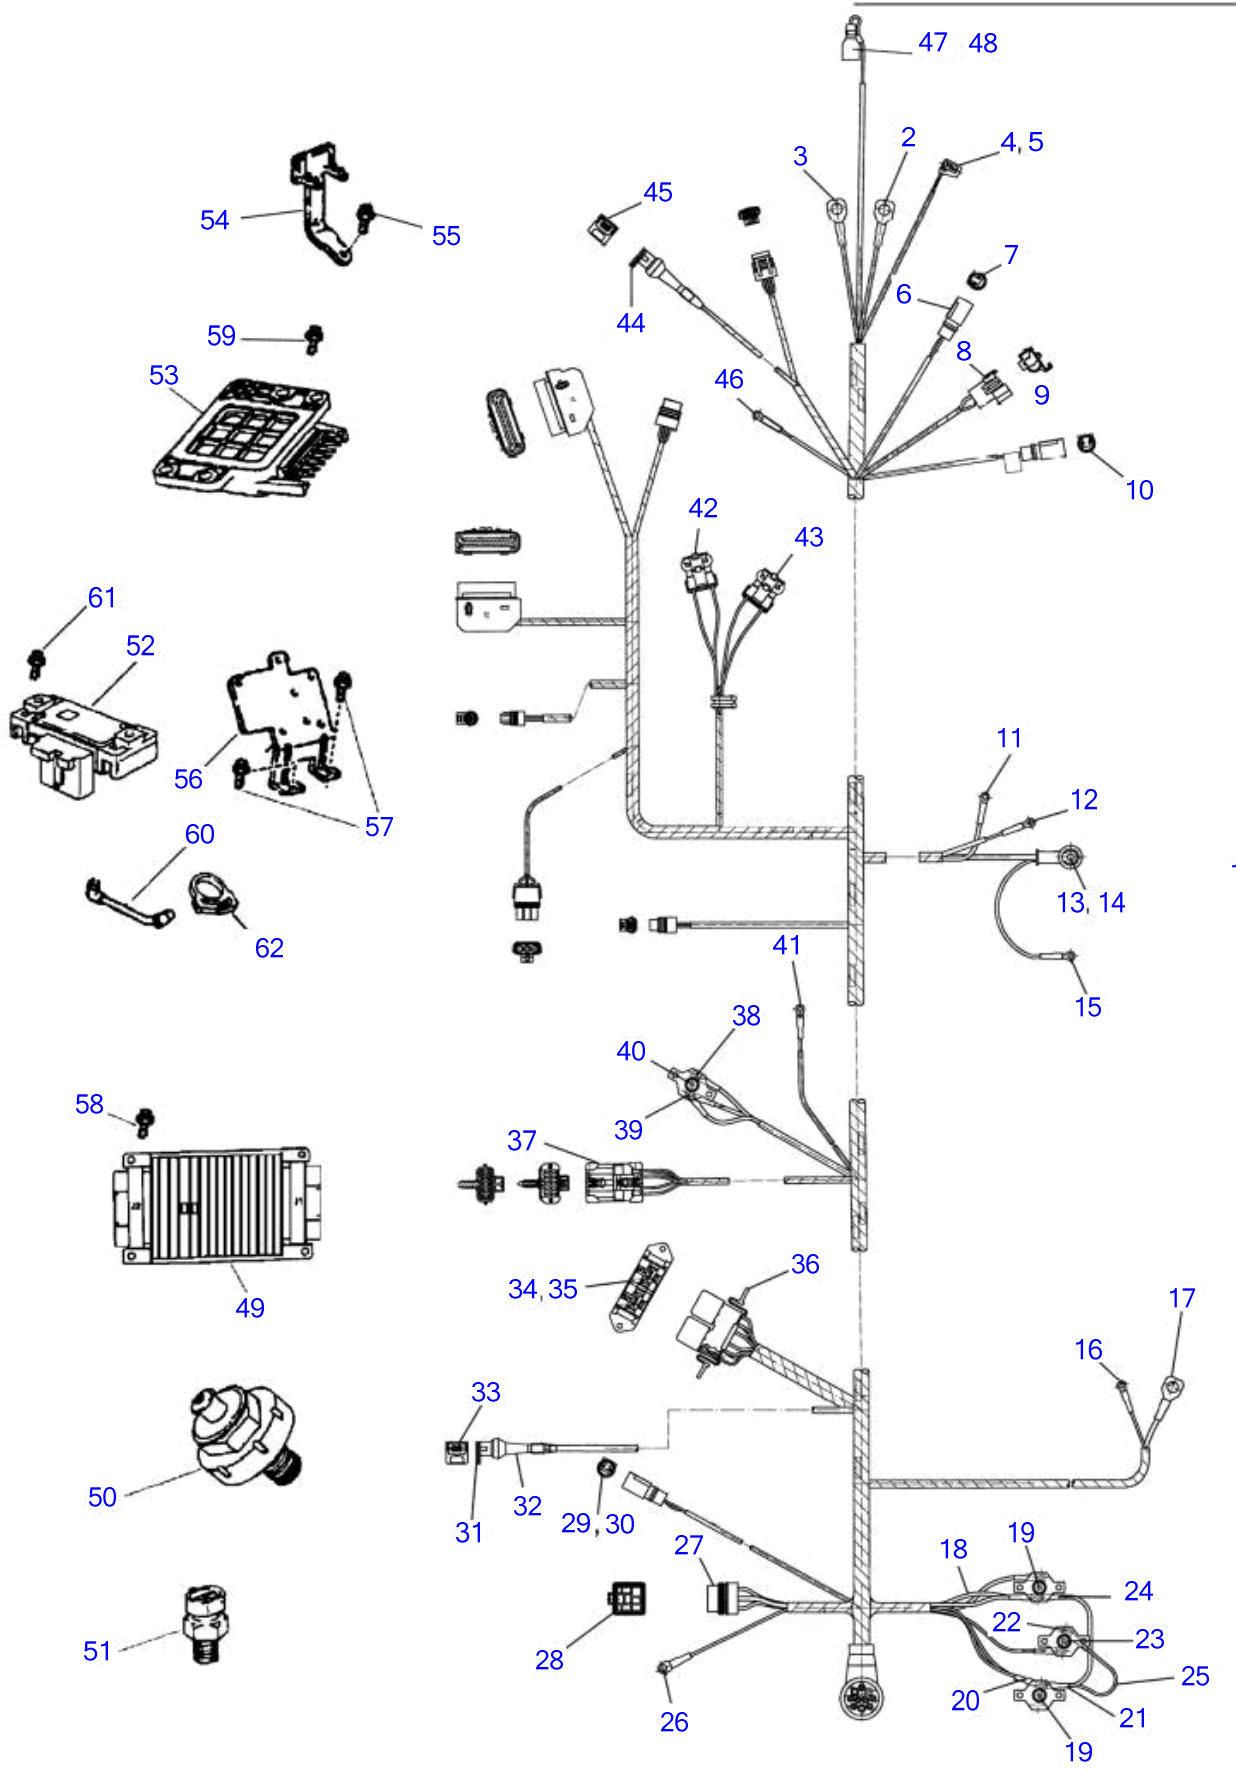

4.3GIPWTC, 4.3GIPWTR, 4.3GIJWTR

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	(3858294)	1	Wiring harness		Obsolete part
2	(3852527)	1	Terminal, trim sender fuel pump		Black, Obsolete part
3	(3852527)	1	Terminal, electrical bra - alternator ground		Obsolete part, Black
4	(3852084)	1	Terminal, oil pressure switch		Obsolete part, Tan
5	(3853320)	1	Cardboard tube, terminal, oil pressure switch		Obsolete part
6	(3853565)	1	Connector, 2 pin		Obsolete part
7	(3852229)	2	Terminal, trim sender		Obsolete part, Brown/white
8	(3854244)	1	Cable, ignition coil		Obsolete part
9	(3853565)	1	Connector, 2 pin		Obsolete part
10	(3852229)	2	Terminal, master/slave		Obsolete part
11	(3852245)	1	Terminal, alternator ground		Obsolete part, Black
12	(3852235)	1	Terminal, alternator excite		Obsolete part, Purple
13	(3852038)	1	Terminal, alternator output		Obsolete part, Orange
14	(3852130)	1	Rubber cap, terminal		Obsolete part
15	(3852233)	1	Terminal, alternator sense		Obsolete part, Orange
16	(3852235)	1	Terminal, starter solenoid - starter terminal		Obsolete part, Red
17	(3852527)	1	Terminal, starter solenoid		Obsolete part
18	(3852245)	3	Terminal		Obsolete part
19	3854164	2	Automatic fuse, 50 amp		Engine
20	(3852245)	1	Terminal		Obsolete part
21	(3852245)	1	Terminal		Obsolete part
22	(3852235)	1	Terminal		Obsolete part
23	3854162	1	Automatic fuse, 12.5 amp		ECA
24	(3852245)	1	Terminal		Obsolete part, Red
25	(3852235)	1	Terminal		Obsolete part, Red
26	(3852227)	1	Terminal		Obsolete part, Black
27	(3854192)	1	Relay, starter relay		Obsolete part
28	(3852254)	4	Terminal		Obsolete part
29	(3853565)	1	Connector, 2 pin shift interrupter		Obsolete part
30	(3852229)	2	Terminal, connector		Obsolete part
31	(3853681)	1	Trunk, connector housing		Obsolete part
32	3855021	1	Connector housing, low pressure fuel pump		
33	3853679	2	Terminal		
34	(3852246)	4	Terminal		Obsolete part
35	(3852247)	4	Terminal		Obsolete part
36	(3852210)	1	Bracket		Obsolete part
37		1			
38	(3852235)	1	Terminal		Obsolete part
39	(3852233)	1	Terminal		Obsolete part
40	3854163	1	Automatic fuse, 20 amp		Fuel pump
41	(3852233)	1	Terminal, water temp transmitter		Obsolete part, Tan
42	(3850671)	2	Cable terminal, injector 1		Obsolete part
43	(3850671)	2	Cable terminal, injector 2		Obsolete part
44	(3853681)	1	Trunk		Obsolete part
45	3853679	2	Terminal, high pressure fuel pump		
46	(3852233)	1	Terminal, oil pressure fuel pump		Obsolete part
47	3857189	1	Cable seal, knock sensor		
48	(3853480)	1	Terminal casing, knock sensor		Obsolete part
49	3860098	1	Engine control modul, electronic control module		
			• Bulletin P-28-4-9	P-28-4-9-EN	ECM Replacement
50	3854905	1	Sensor		
51	3850397	1	Switch		
52	3850396	1	Sensor		
53	(3854672)	1	Module		Obsolete part
54	(3850272)	1	Bracket, knock module		Obsolete part
55	3852115	2	Flange screw, knock module bracket		
56	3851990	1	Bracket		
57	3852115	2	Flange screw, bracket to adapter		
58	3855578	4	Screw, ECM to bracket		
59	3852115	2	Flange screw, knock module to bracket		
60	3850688	4	Hose, map sensor		
61	3852115	2	Flange screw, map sensor to bracket		
62	3852172	1	Hose clamp, hose, map sensor		