

4.3GLPWTC, 4.3GLPWTR, 4.3GSPWTC, 4.3GSPWTR, 4.3GIPWTC, 4.3GIPWTR

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	3857846	1	Housing	
2	3853266	1	Flange screw, flywheel hsg to engine	Port; WTC
	968233	1	Flange screw, flywheel hsg to engine	Port; WTR
	3853326	5	Flange screw, flywheel hsg to engine	GL/GS; WTC
	946472	5	Flange screw, flywheel hsg to engine	GL/GS; WTR
3	3852002	2	Spring washer, ground stud, flywheel hsg	WTC
	3852046	2	Spring washer, ground stud, flywheel hsg	WTR
4	3852058	2	Washer, ground stud, flywheel hsg	WTC
	944633	2	Washer, ground stud, flywheel hsg	WTR
5	3853805	2	Rubber cushion	
6	959968	4	Hexagon screw, rear mount to transom plate	
7	3853972	2	Rubber cushion	
8	(3852155)	4	Washer, rear mount to transom plate	Obsolete part
9	3850930	2	Hexagon screw, rear mount	
10	3850929	2	Lock nut, rear mount	
11	3852540	2	Washer, rear mount to flywheel hsg	
12	3852539	2	Square nut, rear mount	
13	3852622	2	Washer, rear mount	
14	3852542	2	Washer, rear mount	
15	3852483	2	Stud, flywheel housing to engine	Ground; WTC
	3857937	2	Stud, flywheel housing to engine	Ground; WTR
16	(3852065)	4	Nut, terminal to ground stud, flywheel hsg	Obsolete part, WTC
	971071	4	Hexagon nut, terminal to ground stud, flywheel hsg	WTR
17	(3852070)	2	Washer, ground stud, flywheel hsg	Obsolete part, Starboard; WTC
	3852046	2	Spring washer, ground stud, flywheel hsg	Starboard; WTR
18	3857844	2	Bracket, front, port & starboard	
19	3853326	6	Flange screw, front mount bracket to engine	WTC
	946472	6	Flange screw, front mount bracket to engine	WTR
20	3852566	2	Bolt, front mount	
21	3852428	2	Washer, front mount	Lower
22	3852433	2	Washer, front mount	Upper
23	3852021	6	Nut, bolt, mount bracket	
24	3852090	2	Spring washer, bolt, front mount, engine	
25	3852434	1	Clamp	harness
	3852092	1	Attaching clamp	harness
26	(3852146)	1	Clamp	Obsolete part, harness
	3852490	1	Attaching clamp	PS hose
27	3853312	1	Clamp	Stbd, Cooling hose