


4.3GIJWTR, 4.3GSJWTR

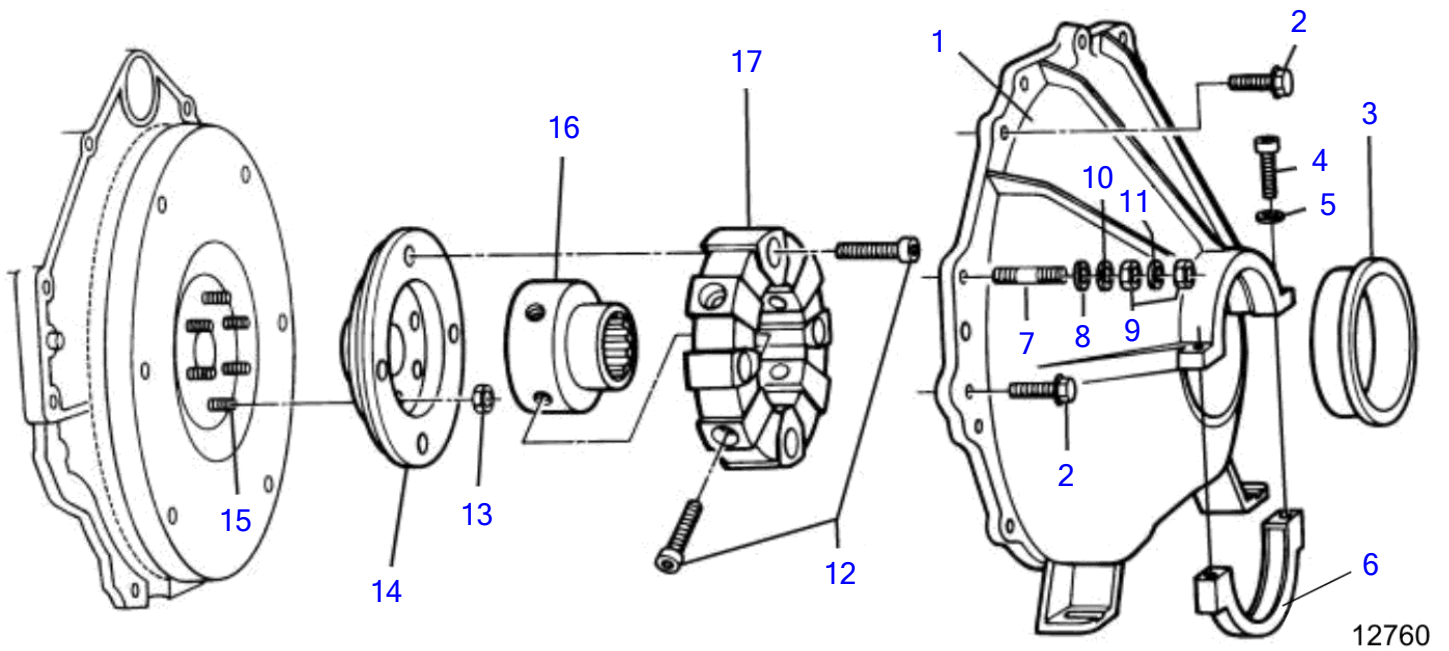

4.3GIJWTR, 4.3GSJWTR

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	3858066	1	Flywheel housing	
2	3853266	1	Flange screw, flywheel housing to engine	Port; WTC
	968233	1	Flange screw, flywheel housing to engine	Port; WTR
	3853326	3	Flange screw, flywheel housing to engine	WTC
	946472	3	Flange screw, flywheel housing to engine	WTR
3	3855641	1	Rubber ring	
4	959243	2	Hex. socket screw, flywheel hsg to pump hsg	
5	3852002	2	Spring washer	
6	3855457	1	Clamp	
7	3850571	2	Stud, flywheel housing to engine	Ground; WTC
	3857937	2	Stud, flywheel housing to engine	Ground; WTR
8	3852058	2	Washer, ground stud, flywheel hsg	WTC
	944633	2	Washer, ground stud, flywheel hsg	WTR
9	(3852065)	4	Nut, ground	Obsolete part, WTC
	971071	4	Hexagon nut, ground	WTR
10	3852002	2	Spring washer, stud, flywheel housing	WTC
	3852046	2	Spring washer, stud, flywheel housing	WTR
11	(3852070)	2	Washer, ground stud, flywheel housing	Obsolete part, WTC
	940147	2	Toothed washer, ground stud, flywheel housing	WTR
12	968004	8	Hex. socket screw, m14 x 40	
13	3853273	6	Nut, flywheel & flange	
14	(3858464)	1	Flange	Obsolete part
15	3853274	6	Stud, flywheel, adapter flange to crankshaft	
16	3855752	1	Hub	
17	(3855459)	1	Rubber damper	Obsolete part