



5.7GIPHUS

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	(3850364)	1	Wiring harness	Obsolete part
2	(3852527)	2	• Terminal, 3/8 in	Obsolete part
3	(3852229)	4	• Terminal	Obsolete part
4	(3853565)	2	• Connector, 2-pin	Obsolete part
5	3853679	4	• Terminal	
6	3855021	2	• Connector housing	
7	(3853681)	2	• Trunk	Obsolete part
8	(3852233)	5	• Terminal, #10	Obsolete part
9	(3852107)	2	• Terminal, ¼ in	Obsolete part
10	(3852130)	1	• Rubber cap	Obsolete part
11	(3852036)	1	• Terminal, #10	Obsolete part
12	(3854192)	1	• Relay	Obsolete part
13	(3852254)	4	• Terminal	Obsolete part
14	(3852235)	5	• Terminal, #10	Obsolete part
15	3850403	2	• Relay	
16	(3852210)	1	• Bracket, relay	Obsolete part
17	(3855022)	1	• Terminal, 3/8 in	Obsolete part
18	3855023	5	• Terminal	
19	(3853478)	9	• Sealing	Obsolete part
20	(3853480)	2	• Terminal casing	Obsolete part
21	3855024	1	• Terminal	
22	3855025	1	• Cable sleeve, terminal	
23	3855026	2	• Connector	
24	(3852084)	1	• Terminal, side receptacie	Obsolete part
25	(3853320)	1	• Cardboard tube	Obsolete part
26	3855027	9	• Terminal	
27	(3854244)	1	• Cable	Obsolete part
28	(3852246)	5	• Terminal, receptacle	Obsolete part
29	(3852247)	3	• Terminal, receptacle	Obsolete part
30	(3850272)	1	Bracket, knock module	Obsolete part
31	3850273	1	Bracket, PCM & MAP sensor	
32	(3850356)	1	Module, knock sensor	Obsolete part
33	3854463	1	Engine control modul, electronic control module	
34	3852115	4	Flange screw, knock sensor bracket	
35	3852115	2	Flange screw, ECM bracket	
36	3852115	2	Flange screw, map sensor bracket	
37	3852115	2	Flange screw, ECM & MAP adapter	
38	3852115	2	Flange screw, knock module bracket	
39	3850357	1	Knock sensor	
40	3850397	1	Switch	
41	3850396	1	Sensor	
42	3850688	1	Hose, MAP sensor to TBI	