


5.8FIPNACE, 5.8FIPNCBCE, 5.8FIPNCMCE, 5.8FIPNCSCE, 5.8FLINCC, 5.8FLINCS, 5.8FLPNCA, 5.8FLPNCB, 5.8FLPNCM, 5.8FLPNCS, 5.8FSIINCC, 5.8FSIINCS, 5.8FSIPNACE, 5.8FSIPNCD, 5.8FSIPNCS

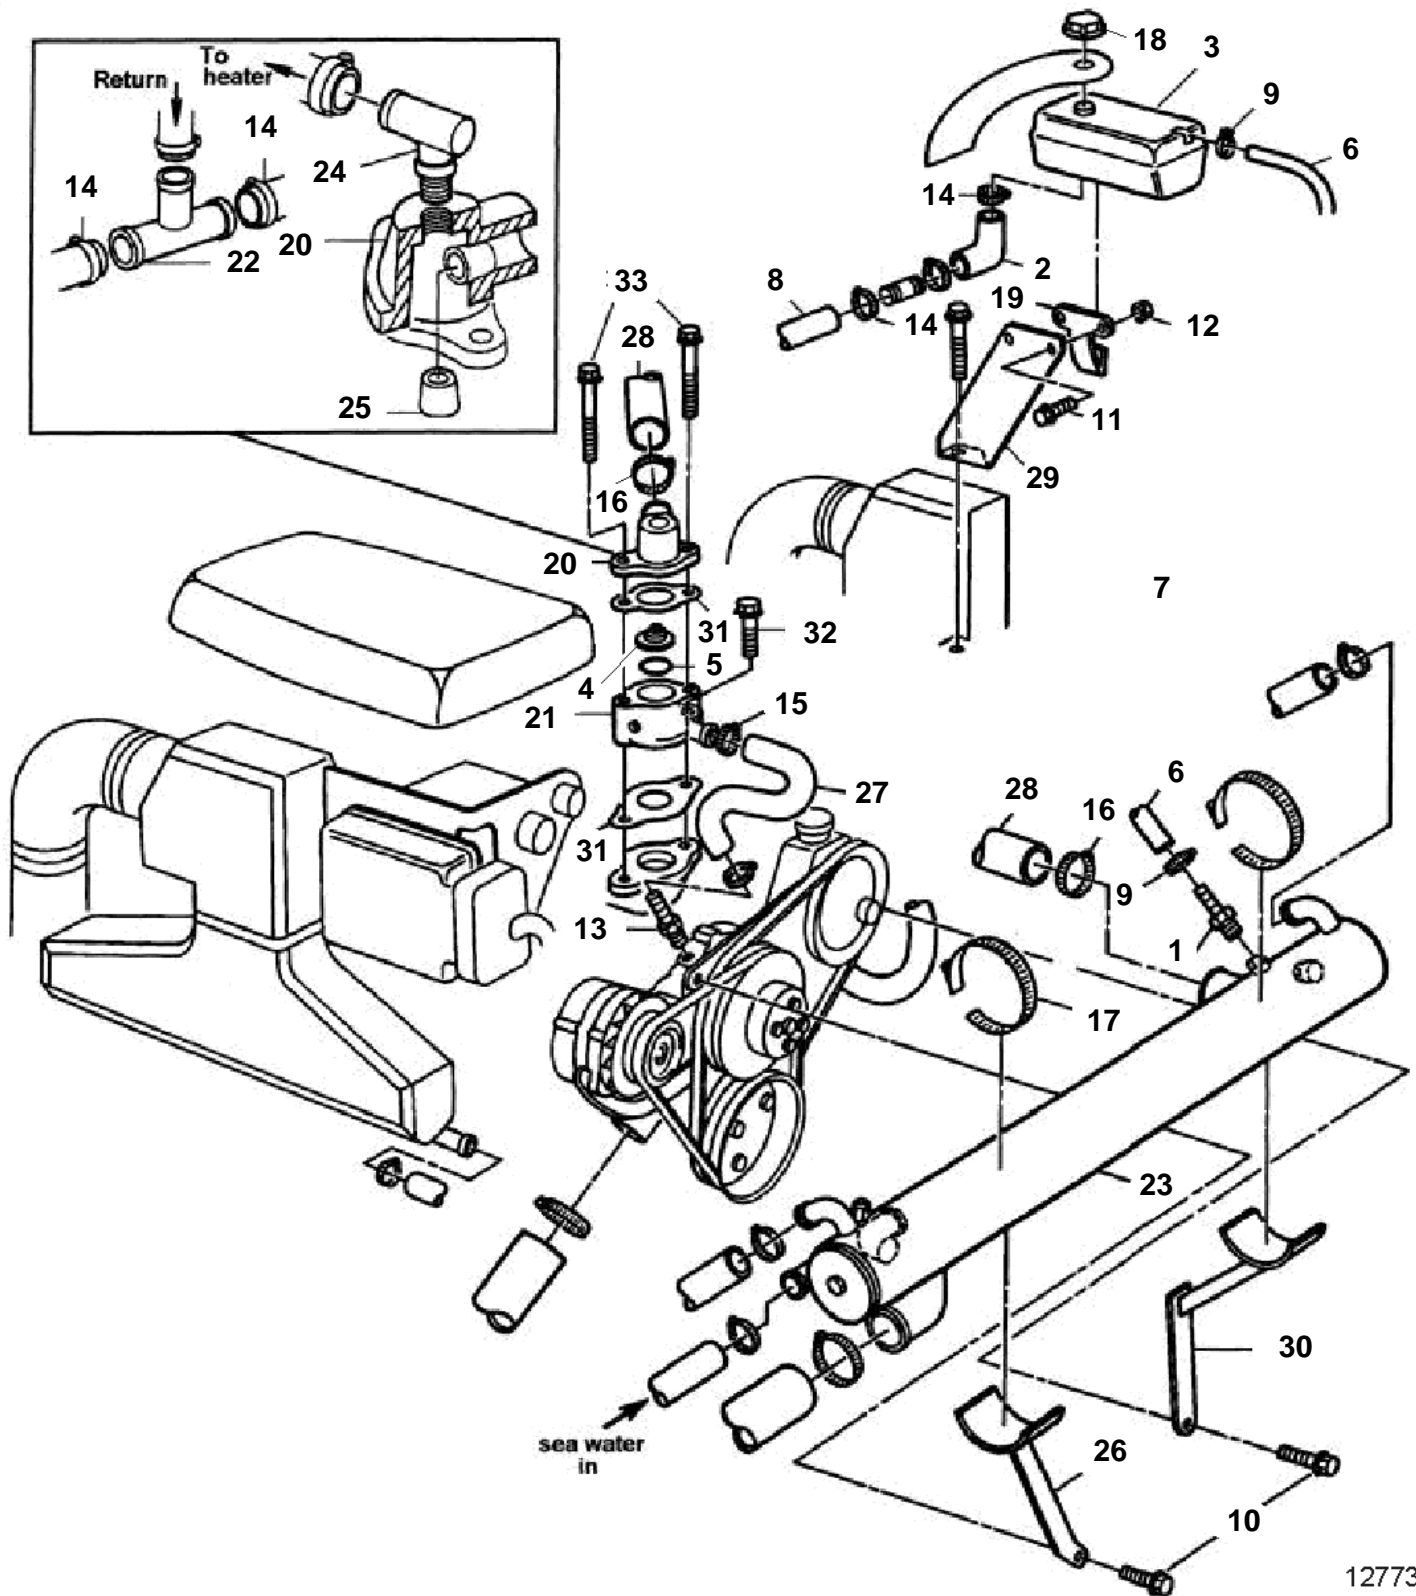

12773

5.8FIPNCACE, 5.8FIPNCBCE, 5.8FIPNCMCE, 5.8FIPNCSCE, 5.8FLINCC, 5.8FLINCS, 5.8FLPNCA, 5.8FLPNCB, 5.8FLPNCM, 5.8FLPNCS, 5.8FSIINCC, 5.8FSIINCS, 5.8FSIPNCACE, 5.8FSIPNCD, 5.8FSIPNCS

REF	PART NO.	QTY	DESCRIPTION	NOTES
1		1	Heat exchanger	5.0 FL, Fi 15.8 FL, Fi, FSi
	180254	1	• Elbow nipple	
2	857500	1	• Hose	
3	861105	1	• Expansion tank	
4	875788	1	• Thermostat kit	
5	416033	1	• • Sealing ring	
6	942700	1	• Hose	
7	943367	1	• Rubber hose	L=250mm, Not shown
8	943369	1	• Rubber hose	L=15000mm
9	945652	2	• Hose clamp	
10	945767	2	• Flange screw	
11	946173	2	• Flange screw	
12	948645	2	• Flange lock nut	
13	961659	1	• Hose nipple	
14	961666	12	• Hose clamp	
15	961667	2	• Hose clamp	
16	961670	2	• Hose clamp	
17	961674	2	• Hose clamp	
18	1357775	1	• Pressure cap	
19	3851363	1	• Bracket	
20	3851383	1	• Thermostat housing	
	968147	1	• • Plug	
21	3851384	1	• Thermostat housing	
	479977	1	• • Plug	
	968145	1	• • Plug	
22	3851414	1	• Connection pipe	
23	3851617	1	• Heat exchanger	
	192134	1	• • Plug	
	841068	2	• • Bolt	
		2	• • Cover	
	3851619	2	• • Gasket	
	3851598	1	• Fitting	Not shown
24	961611	1	• Hose nipple	
25	3851385	1	• Plug	
26	3851682	1	• Bracket	
27	3851760	1	• Hose	
28	3851761	1	• Hose	
29		1	• Bracket	
30		1	• Bracket, Fi	
	3851934	1	• Bracket, FL	
31	3852111	2	• Gasket	
32	3853391	1	• Screw	
33	3853401	2	• Screw	
	961663	2	• Hose clamp	See no. 20, FWC installation instructions (PIN 7736035)
	961669	1	• Hose clamp	See no. 20, FWC installation instructions (PIN 7736035)
	3853598	1	• Elbow	See no. 20, FWC installation instructions (PIN 7736035)