



9614

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	855777	1	Camshaft, INLET		
	855778	1	Camshaft, EXHAUST		
2	949433	2	• Pin		
3		5	BEARINGCAP	02A-1240	
4	463690	2	Guide sleeve	02A-1240	
5	1306333	2	Sealing ring	IK	
6	1357572	1	Washer		
7	855787	2	Wheel	02A-0975	
8	463580	2	Washer		
9	955322	2	Screw		
10	1378960	16	Valve guide		(1317758)
11	1326514	8	Seat ring, INLET		STD
12	1326517	8	Seat ring, EXHAUST		STD
13	1317793	8	Valve, INLET		
14	1317792	8	Valve, EXHAUST		
15	3517860	8	Valve stem seal	IK	INLET
16	1317794	16	Washer		
17	1332055	16	Valve spring		
18	1317796	16	Washer		
19	1378130	32	Valve collet		
20	1317798	16	Tappet		
21	463546	16	Adjusting washer		TH = 3,30 MM
	463547	X	Adjusting washer		TH = 3,35 MM
	463548	X	Adjusting washer		TH = 3,40 MM
	463549	X	Adjusting washer		TH = 3,45 MM
	463550	X	Adjusting washer		TH = 3,50 MM
	463551	X	Adjusting washer		TH = 3,55 MM
	463552	X	Adjusting washer		TH = 3,60 MM
	463553	X	Adjusting washer		TH = 3,65 MM
	463554	X	Adjusting washer		TH = 3,70 MM
	463555	X	Adjusting washer		TH = 3,75 MM
	463556	X	Adjusting washer		TH = 3,80 MM
	463557	X	Adjusting washer		TH = 3,85 MM
	463558	X	Adjusting washer		TH = 3,90 MM
	463559	X	Adjusting washer		TH = 3,95 MM
	463560	X	Adjusting washer		TH = 4,00 MM
	463561	X	Adjusting washer		TH = 4,05 MM
	463562	X	Adjusting washer		TH = 4,10 MM
	463563	X	Adjusting washer		TH = 4,15 MM
	463564	X	Adjusting washer		TH = 4,20 MM
	463565	X	Adjusting washer		TH = 4,25 MM
	463566	X	Adjusting washer		TH = 4,30 MM
	463567	X	Adjusting washer		TH = 4,35 MM
	463568	X	Adjusting washer		TH = 4,40 MM
	463569	X	Adjusting washer		TH = 4,45 MM
	463570	X	Adjusting washer		TH = 4,50 MM