



UP  
 ↑  
 LUBRICATION INSTRUCTIONS  
 1. Before starting the pump, check the oil level in the oil reservoir.  
 2. The oil level should be maintained at the level of the oil level indicator.  
 3. The oil level should be checked regularly.  
 4. The oil level should be checked before starting the pump.  
 5. The oil level should be checked after the pump has been running for a few minutes.  
 6. The oil level should be checked after the pump has been running for a few hours.  
 7. The oil level should be checked after the pump has been running for a few days.  
 8. The oil level should be checked after the pump has been running for a few weeks.  
 9. The oil level should be checked after the pump has been running for a few months.  
 10. The oil level should be checked after the pump has been running for a few years.

8866

REF	PART NO.	QTY	DESCRIPTION
1	855860	1	Power steering pump
2		1	· HOUSING
3		1	· SHAFT KIT
4		1	· · DRIVE SHAFT
5	273881	1	· Sealing ring kit
5A		X	· SHIM
6		1	· HUB
7		1	· SEAL
8		1	· ROTOR KIT
9		1	· · ROTOR
10		1	· · VANE
11		1	· · RING
12	273905	1	· Valve kit
13		1	· · VALVE
14		1	· · SPRING
15	1272427	2	· Pin
16	1329586	1	· Plate
17		1	· THRUST PLATE
18	1329589	1	· Spring
19	855735	1	· Sealing kit
20		1	· · O-RING
21		1	· · O-RING
22		2	· · O-RING
23		2	· · O-RING
24		1	· · LOCK RING
25	855544	1	· Oil container kit
26		1	· · O-RING
27		1	· · O-RING
28		2	· · O-RING
29	828951	2	· Stud
30		1	· COVER
31			· SIGN