



# ENGINE WIRE HARNESS, Gi

REF	PART NO.	QTY	DESCRIPTION
1	3860044	1	Cable harness
2	3852527	1	Cable terminal
3	3853565	1	Connector, Trim sender
4	3852229	2	Cable terminal, Trim sender
5	3852084	1	Cable terminal, Oil pressure switch
6	3853320	1	Cover, Oil pressure switch
7	3852233	1	Cable terminal, Oil pressure transmitter
8	3857189	1	Seal, Knock sensor
9	3853480	1	Terminal casing, Knock sensor
10	3854244	1	Cable
11	3852210	1	Bracket, Fuel pump and ignition relay
12	3852233	1	Cable terminal, Water temperature transmitter
13	3855021	1	Housing, Low pressure fuel pump
14	3853681	1	Cover, Low pressure fuel pump
15	3853679	2	Cable terminal, Low pressure fuel pump
16	3853679	2	Cable terminal, High pressure fuel pump
17	3853681	1	Cover, High pressure fuel pump
18	3855021	1	Housing, High pressure fuel pump
19	3852235	1	Cable terminal, Starter solenoid starter terminal
20	3852527	1	Cable terminal, Alternator output
21	3852527	1	Cable terminal, Starter solenoid
22	3852245	1	Cable terminal, Circuit breaker
23	3854164	2	Fuse, 50 amp
24	3860455	3	Fuse holder
25	3852227	1	Cable terminal, Electrical bracket ground
26	3854192	1	Connector, Starter relay
27	3852254	4	Cable terminal, Starter relay
28	3850025	1	
29	3852158	1	Lock strap
30	3852229	2	Cable terminal, Shift interrupt
31	3853565	1	Connector, Shift interrupt
32	514106	1	Idle air control (IAC)
33	3852233	1	Cable terminal, Alternator sense
34	3852038	1	Cable terminal, Alternator output
35	3852130	1	Rubber cap, Alternator output
36	3852235	1	Cable terminal, Alternator excite
37	3852245	1	Cable terminal, Alternator ground
38	3857142	1	Connector, MAT sensor
39	514106	1	Distributor
40	3852229	2	Cable terminal
41	3853565	1	Connector
42	979686	2	Fuse, 40 amp
43	966329	2	Fuse, 15 amp
44	968547	2	Fuse, 20 amp
45	3860455	3	Fuse holder