



ALTERNATOR

REF	PART NO.	QTY	DESCRIPTION	NOTES
	3853853	1	Alternator	
1	3852647	1	· Housing, Front	
2	3853838	1	· Rotor	
3	3853837	1	· Stator	
4	3852646	1	· Housing, Rear	
5	3852645	1	· Fan	
6	3852644	1	· Pulley	
7	3852643	2	· Bearing, Front & rear	
8	3852624	2	· Isolation, Red	
9	3852623	1	· Isolation, Boot	
10	3852642	1	· Bearing carrier, Rear bearing	
11	3852641	1	· Diode	
12	3853836	1	· Diode bridge	
13	3852640	1	· Plate, B+	
14	3853835	1	· Brush retainer	
15	3852639	1	· Spacer, Fan	
16	3852638	1	· Key, Woodruff	
17	3852637	1	· Gasket	
18	3853834	1	· Cover	
19	3852636	1	· Capacitor	
20	3852635	1	· Plate, AC tap	
21	3852625	1	· Lock washer, Pulley	
22	3852736	1	· Screw, Capacitor	
23	3852630	1	· Nut, Pulley	
24	3853833	1	· Regulator	
25	3852634	4	· Screw, Through	
26	3852734	4	· Screw, Front housing	
27	3852629	2	· Screw, Regulator	
28	3852736	1	· Screw, Alternator ground	
29	3852735	8	· Screw, Diode field	
30	3852628	3	· Screw, Diode field	
31	3852633	2	· Nut	
32	3852632	9	· Lock nut	
33	3852732	2	· Washer, Insulator	
34	3852626	5	· Washer	
35	3853881	1	· Cover plate	
36	3852737	2	· Screw, Terminal	
37	3852054	1	Washer, Brace to alternator	
38	3854089	1	Bracket, Alternator to manifold	Power steering
	3854068	1	Bracket, Alternator to engine	Without power steering
39	3852740	1	· Bushing, Alternator bracket	Power steering
	3852969	1	· Bushing, Alternator to bracket	Without power steering
40	3853388	1	Screw, Alternator to bracket	Without power steering
41	3853367	1	Screw, Alternator to bracket	Power steering
42	3852051	1	Nut, Alternator to bracket	
43	3853393	2	Screw, Bracket to manifold	Power steering
44	3852069	1	Washer, Alternator ground	
45	3852060	1	Screw, Brace to pump	Without power steering
	3853399	1	Screw, Brace to therm. Hsg	Power steering
47	3852058	1	Washer, Screw, alternator	
48	3853326	2	Screw, Bracket to engine	Without power steering
49	3853410	1	Brace, Alternator	Without power steering
	3853411	1	Brace, Alternator	Power steering
50	3853396	1	Screw, Brace to alternator	