


# SX - TRANSOM PLATE, FLYWHEEL HOUSING & MOUNTS

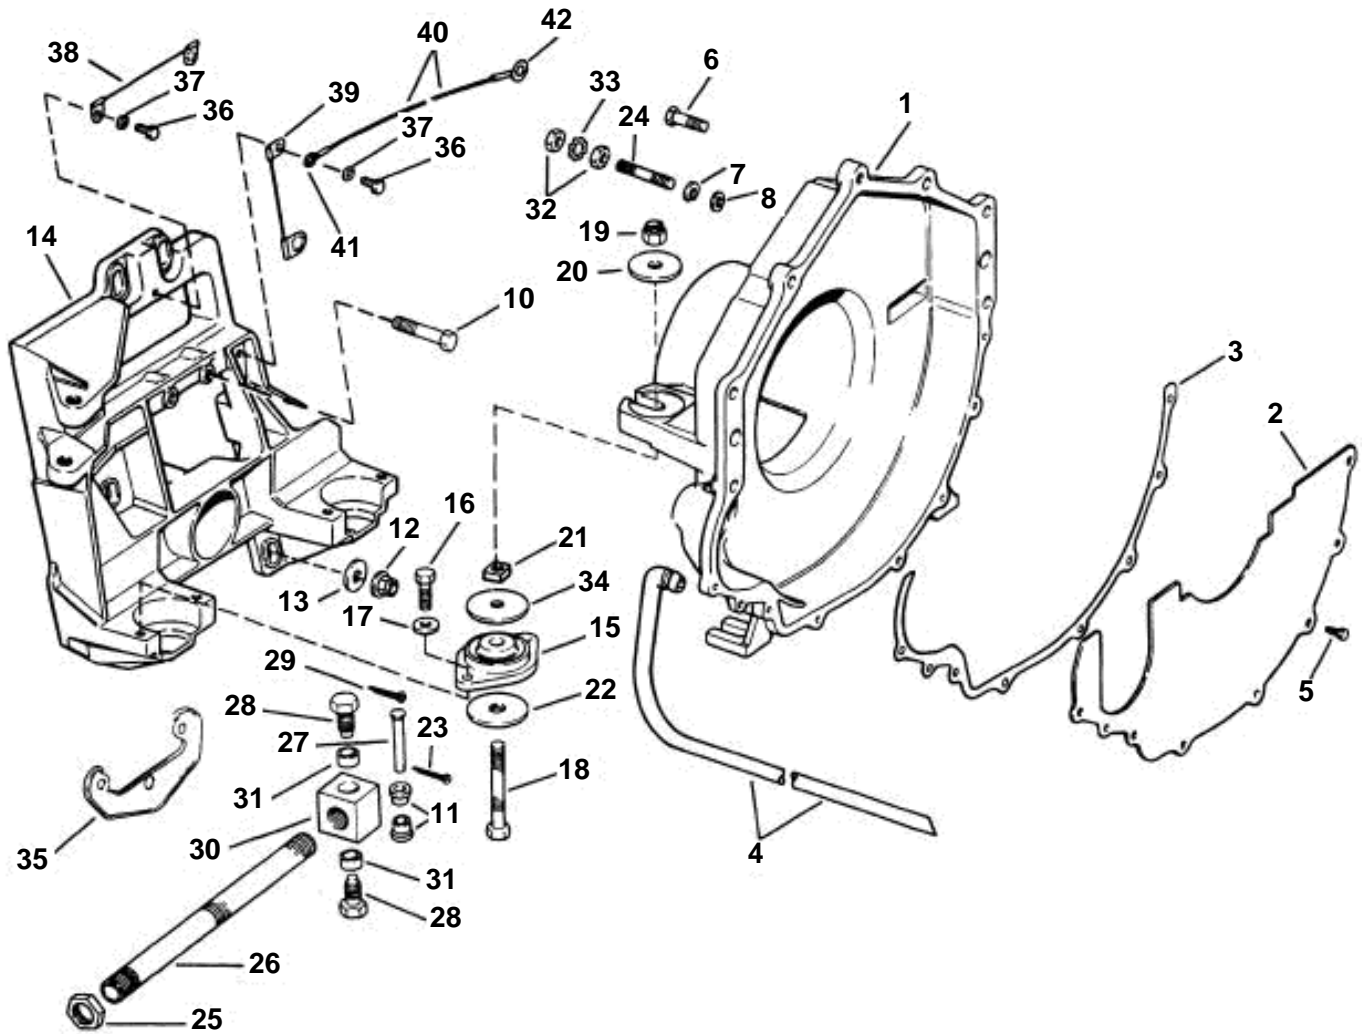

# SX - TRANSOM PLATE, FLYWHEEL HOUSING & MOUNTS

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	3853457	1	Flywheel housing, Flywheel	
2	3853001	1	Cover plate, Flywheel	
3	3853002	1	Gasket, Flywheel housing	
4	3852832	1	Hose, Flywheel housing	
5	3852421	8	Screw, Flywheel cover	
6	3853326	5	Screw, Flywheel housing	
	3853557	1	Screw, Electrical bracket	
7	3852002	1	Lock washer, Flywheel hsg	
8	3852058	1	Washer, Flywheel housing	
10	3853547	2	Screw, Transom plate	
11	3853263	1	Bushing, Steering arm	Model Without Power Steering
12	3853329	6	Nut, Transom plate	
13	3852573	4	Washer, Transom plate	
14	3852381	1	Plate	
15	3853806	2	Rubber cushion	
16	3852085	4	Screw, Rear mount to plate	
17	3852155	4	Washer, Rear mount to plate	
18	3852153	2	Screw, Rear mount	
19	3852122	2	Lock nut, Rear mount	
20	3852540	2	Washer	
21	3852539	2	Nut	
22	3852542	2	Washer	
23	3852255	1	Cotter pin, Clevis	Model Without Power Steering
24	3852483	1	Stud, Ground	
25	3852484	1	Nut, Steering tube (1)	Model Without Power Steering
26	3853449	1	Guide tube, Steering	Model Without Power Steering
27	3853258	1	Clevis pin, Cable to clevis	Model Without Power Steering
28	3852570	2	Screw, Steering anchor	
29	3853376	2	Cotter pin, Steering anchor	
30	3853808	1	Anchorage	Model Without Power Steering
31	3852582	2	• Bearing bushing, Steering pivot	Model Without Power Steering
32	3852065	2	Nut, Ground	
33	3852070	1	Washer, Ground	
34	3852622	2	Washer, Rear mount	
35	3852605	1	Backing plate, Transom	
36	3852050	3	Screw, Ground wire	
37	3852193	3	Washer, Ground wire	
38	3853929	1	Ground cable, Bracket to arm	
39	3853928	1	Ground cable, Bracket to stud	
40	3853927	1	Ground cable, Bracket to engine	
41	3854243	1	• Connector	
42	3852527	1	• Cable terminal	