


# SX - TRANSOM PLATE, FLYWHEEL HOUSING & MOUNTS

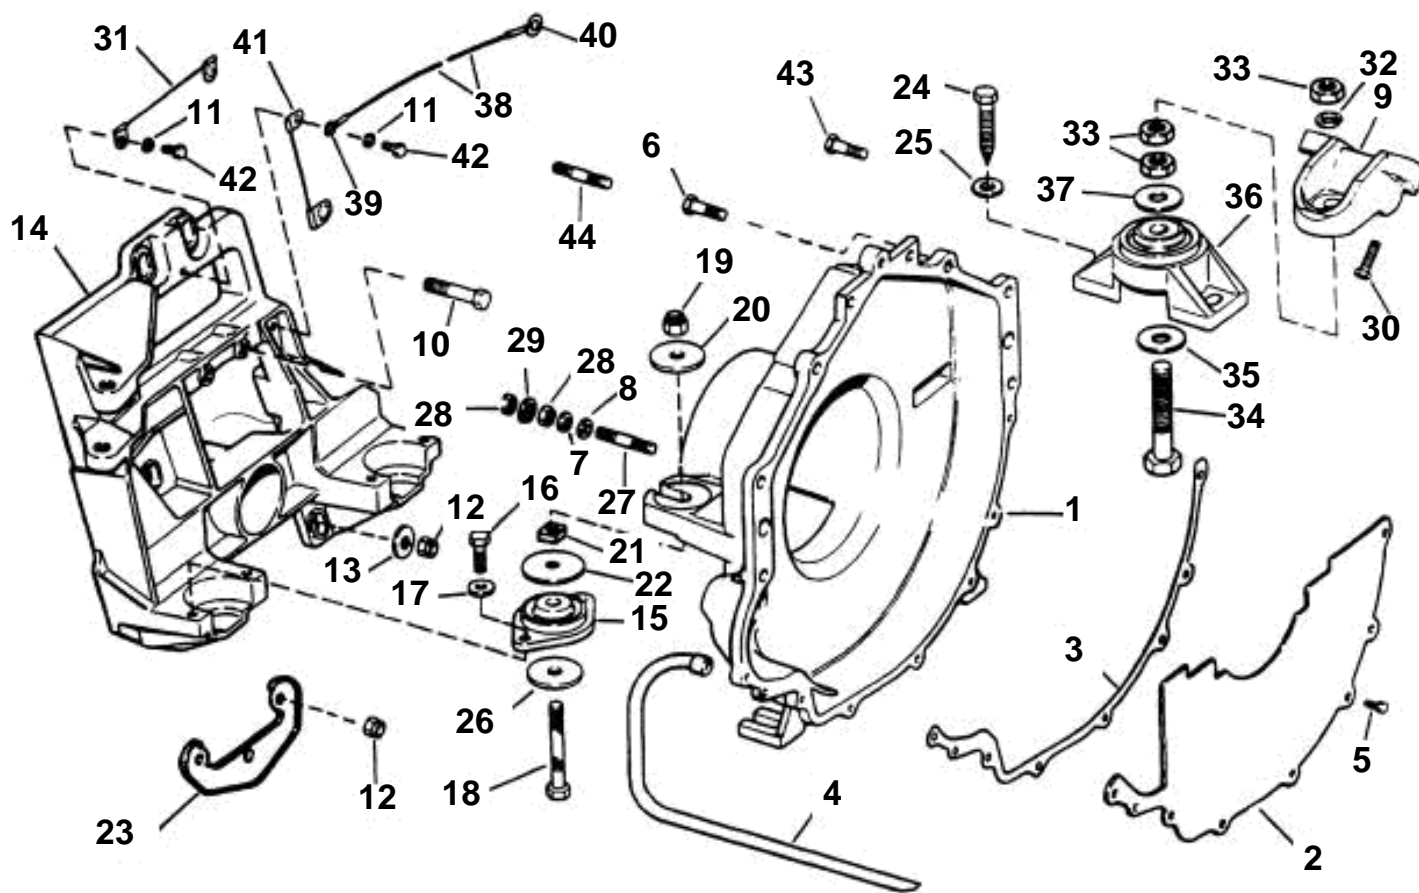

# SX - TRANSOM PLATE, FLYWHEEL HOUSING & MOUNTS

REF	PART NO.	QTY	DESCRIPTION
1	3853457	1	Flywheel housing, Flywheel
2	3852833	1	Cover plate, Flywheel
3	3852834	1	Gasket, Flywheel
4	3852832	1	Hose, Flywheel housing
5	3852421	7	Screw, Flywheel cover
6	3853266	1	Screw, Upper, port, 1 in
	3853326	2	Screw, Upper, starboard, 1 1/4 in
7	3852002	2	Lock washer, Flywheel housing
8	3852058	2	Washer, Flywheel housing
9	3852760	2	Bracket, Front
10	3853547	2	Screw, Transom plate
11	3852193	2	Washer, Ground strap
12	3853329	8	Nut, Transom plate
13	3852573	6	Washer, Transom plate
14	3852381	1	Plate
15	3853806	2	Rubber cushion
16	3852085	4	Screw, Rear mount to plate
17	3852155	4	Washer, Rear mount to plate
18	3852153	2	Screw, Rear mount
19	3852122	2	Lock nut, Rear mount
20	3852540	2	Washer, Rear mount
21	3852539	2	Nut, Rear mount
22	3852622	2	Washer, Rear mount
23	3852605	1	Backing plate
24	3852475	4	Screw
25	3852078	4	Washer, Lag screw
26	3852542	2	Washer, Mount
27	3852483	2	Stud, Ground
28	3852065	4	Nut, Ground
29	3852070	2	Washer, Ground
30	3853326	6	Screw, Mount
31	3853929	1	Ground cable, Bracket to arm
32	3852090	2	Lock washer, Front mount
33	3852021	6	Nut, Front mount
34	3852566	2	Screw, Engine mount
35	3852428	2	Washer, Lower
36	3853805	2	Rubber cushion
37	3852433	2	Washer, Front mount
38	3853927	1	Ground cable, Bracket to engine
39	3854243	1	• Connector
40	3852527	1	• Cable terminal
41	3853928	1	Ground cable, Bracket to stud
42	3852050	2	Screw, Ground strap
43	3853393	2	Screw, Flywheel housing to block
44	3850571	2	Stud, Engine groung