

Upd: 22 NOV 2005

FLYWHEEL HOUSING & MOUNTS

Section	REF	PART NO.	QTY	DESCRIPTION	NOTES
2 3854804 1 Cover 3 3852834 1 Gasket, Flywheel cover 4 3852832 1 Hose, Flywheel hsg 5 3852421 7 Screw, Flywheel hsg to engine, port 6 3853266 1 Screw, Flywheel hsg to engine, port 8 3852000 2 Washer, Flywheel housing 9 3852760 2 Bracket, Front, port & starboard 10 959968 4 Screw, Rear mount to transom plate 11 3853972 2 Rubber cushion, Transom plate 12 3852155 4 Washer, Rear mount to transom plate 13 3850930 2 Screw, Rear mount 14 3850929 2 Nut, Rear mount 15 3852540 2 Washer, Rear mount 16 3852539 2 Nut, Rear mount 18 3852475 4 Screw, Engine to boat stringers 19 3852078 4 Washer, Rear mount 20 3852640 2 Stud, Flywheel hsg to engine 21 3852085	1		1		7.4 GL, Gi, GSi
3 3852834 1 - Gasket, Flywheel cover 4 3852832 1 - Hose, Flywheel hsg 5 3852421 7 - Screw, Flywheel cover 6 3853266 1 - Screw, Flywheel hsg to engine, port 7 3852070 2 - Washer, Ground stud, flywheel hsg 8 3852000 2 - Washer, Flywheel housing 9 3852760 2 - Bracket, Front, port & starboard 10 959968 4 - Screw, Rear mount to transom plate 11 3853972 2 - Rubber cushion, Transom plate 12 3852155 4 - Washer, Rear mount to transom plate 13 3850930 2 - Screw, Rear mount 14 3850929 2 - Nut, Rear mount 15 3852540 2 - Washer, Rear mount 16 3852539 2 - Nut, Rear mount 17 3852622 2 - Washer, Rear mount 18 3852475 4 - Screw, Engine to boat stringers 19 3852083 2 - Stud, Flywheel hsg to engine			1		8.2 GSi
4 3852832 1 - Hose, Flywheel hsg 5 3852421 7 - Screw, Flywheel cover 6 3853266 1 - Screw, Flywheel hsg to engine, port 7 3852070 2 - Washer, Ground stud, flywheel hsg 8 3852000 2 - Washer, Flywheel housing 9 3852760 2 - Bracket, Front, port & starboard 10 959968 4 - Screw, Rear mount to transom plate 11 3853972 2 - Rubber cushion, Transom plate 12 3852155 4 - Washer, Rear mount to transom plate 13 3850930 2 - Screw, Rear mount 14 3850929 2 - Nut, Rear mount 15 3852540 2 - Washer, Rear mount 16 3852639 2 - Nut, Rear mount 17 3852622 2 - Washer, Rear mount 18 3852475 4 - Screw, Engine to boat stringers 20 3852624 2 - Washer, Rear mount 21 3852483 2 - Stud, Flywheel hsg to engine <					
5 3852421 7 Screw, Flywheel cover 6 3853266 1 Screw, Flywheel hsg to engine, port 7 3852070 2 Washer, Ground stud, flywheel hsg 8 3852000 2 Washer, Flywheel housing 9 3852760 2 Bracket, Front, port & starboard 10 959968 4 Screw, Rear mount to transom plate 11 3853972 2 Rubber cushion, Transom plate 12 3852155 4 Washer, Rear mount to transom plate 13 3850930 2 Screw, Rear mount 14 3850929 2 Nut, Rear mount 15 3852540 2 Washer, Rear mount 16 3852539 2 Nut, Rear mount 17 3852622 2 Washer, Rear mount 18 3852475 4 Screw, Engine to boat stringers 19 3852483 2 Stud, Flywheel hsg to engine 20 3852483 2 Stud, Flywheel hsg to engine 21 3852002 1 Lock washer, Ground stud, flywheel hsg					
6 3853266 1 Screw, Flywheel hsg to engine, port 7 3852070 2 Washer, Ground stud, flywheel hsg 8 3852000 2 Washer, Flywheel housing 9 3852760 2 Bracket, Front, port & starboard 10 959968 4 Screw, Rear mount to transom plate 11 3853972 2 Rubber cushion, Transom plate 12 3852155 4 Washer, Rear mount to transom plate 13 3850930 2 Screw, Rear mount 14 3850929 2 Nut, Rear mount 15 3852540 2 Washer, Rear mount 16 3852539 2 Nut, Rear mount 17 3852622 2 Washer, Rear mount 18 3852475 4 Screw, Engine to boat stringers 19 3852642 2 Washer, Rear mount 21 3852053 2 Nut, Terminal to ground stud, flywheel hsg 23 3852065 2 Nut, Terminal to ground stud, flywheel hsg 24 3853206 2 Nut, Terminal to engine <td></td> <td></td> <td></td> <td></td> <td></td>					
7 3852070 2 • Washer, Ground stud, flywheel hsg 8 3852000 2 • Washer, Flywheel housing 9 3852760 2 • Bracket, Front, port & starboard 10 959968 4 • Screw, Rear mount to transom plate 11 3853972 2 • Rubber cushion, Transom plate 12 3852155 4 • Washer, Rear mount to transom plate 13 3850930 2 • Screw, Rear mount 14 3850929 2 • Nut, Rear mount 15 3852540 2 • Washer, Rear mount to flywheel hsg 16 3852539 2 • Nut, Rear mount 17 3852622 2 • Washer, Rear mount 18 3852475 4 • Screw, Engine to boat stringers 19 3852078 4 • Washer, Rear mount 21 3852483 2 • Washer, Rear mount 21 3852065 2 • Nut, Terminal to ground stud, flywheel hsg 23 3852002 1 • Lock washer, Front mount bracket to engine 25 3852090 2 • Lo					
8 3852000 2 · Washer, Flywheel housing 9 3852760 2 · Bracket, Front, port & starboard 10 959968 4 · Screw, Rear mount to transom plate 11 3853972 2 · Rubber cushion, Transom plate 12 3852155 4 · Washer, Rear mount to transom plate 13 3850930 2 · Screw, Rear mount 14 3850929 2 · Nut, Rear mount 15 3852540 2 · Washer, Rear mount 16 3852539 2 · Nut, Rear mount 17 3852622 2 · Washer, Rear mount 18 3852475 4 · Screw, Engine to boat stringers 19 3852078 4 · Washer, Rear mount 21 3852483 2 · Stud, Flywheel hsg to engine 22 3852042 2 · Nut, Terminal to ground stud, flywheel hsg 23 3852002 1 · Lock washer, Ground stud, flywheel hsg 24 3853326 6 · Screw, Front mount bracket to engine 25 3852090 2 · Lock was				Screw, Flywheel hsg to engine, port	
9 3852760 2 Bracket, Front, port & starboard 10 959968 4 Screw, Rear mount to transom plate 11 3853972 2 Rubber cushion, Transom plate 12 3852155 4 Washer, Rear mount to transom plate 13 3850930 2 Screw, Rear mount 14 3850929 2 Nut, Rear mount 15 3852540 2 Washer, Rear mount to flywheel hsg 16 3852539 2 Nut, Rear mount 17 3852622 2 Washer, Rear mount 18 3852475 4 Screw, Engine to boat stringers 19 3852078 4 Washer, Engine to boat stringers 20 385242 2 Washer, Rear mount 21 3852483 2 Stud, Flywheel hsg to engine Ground 22 3852065 2 Nut, Terminal to ground stud, flywheel hsg Stbd 24 3853266 2 Nut, Terminal to ground stud, flywheel hsg Stbd 24 3853209 2 Lock washer, Front mount, engine 25					
10 959968 4 Screw, Rear mount to transom plate 11 3853972 2 Rubber cushion, Transom plate 12 3852155 4 Washer, Rear mount to transom plate 13 3850930 2 Screw, Rear mount 14 3850929 2 Nut, Rear mount 15 3852540 2 Washer, Rear mount flywheel hsg 16 3852539 2 Nut, Rear mount 17 3852622 2 Washer, Rear mount 18 3852475 4 Screw, Engine to boat stringers 19 3852542 2 Washer, Rear mount 20 3852542 2 Washer, Rear mount 21 3852483 2 Stud, Flywheel hsg to engine 22 3852065 2 Nut, Terminal to ground stud, flywheel hsg 23 3852002 1 Lock washer, Ground stud, flywheel hsg 24 3853326 6 Screw, Front mount bracket to engine 25 3852090 2 Lock washer, Front mount, engine				· Washer, Flywheel housing	
11 3853972 2 Rubber cushion, Transom plate 12 3852155 4 Washer, Rear mount to transom plate 13 3850930 2 Screw, Rear mount 14 3850929 2 Nut, Rear mount 15 3852540 2 Washer, Rear mount to flywheel hsg 16 3852539 2 Nut, Rear mount 17 3852622 2 Washer, Rear mount 18 3852475 4 Screw, Engine to boat stringers 19 3852542 2 Washer, Rear mount 20 3852483 2 Stud, Flywheel hsg to engine 21 3852405 2 Nut, Terminal to ground stud, flywheel hsg 23 3852002 1 Lock washer, Ground stud, flywheel hsg 24 3853326 6 Screw, Front mount bracket to engine 25 3852090 2 Lock washer, Front mount 26 3852090 2 Lock washer, Front mount, engine 27 3852021 6 Nut, Bolt, mount bracket Front 28 3853805 2 Rubber cushi				Bracket, Front, port & starboard	
12 3852155 4 • Washer, Rear mount to transom plate 13 3850930 2 • Screw, Rear mount 14 3850929 2 • Nut, Rear mount 15 3852540 2 • Washer, Rear mount to flywheel hsg 16 3852539 2 • Nut, Rear mount 17 3852622 2 • Washer, Rear mount 18 3852475 4 • Screw, Engine to boat stringers 19 3852542 2 • Washer, Rear mount 20 3852542 2 • Washer, Rear mount 21 3852483 2 • Stud, Flywheel hsg to engine Ground 22 3852065 2 • Nut, Terminal to ground stud, flywheel hsg Stbd 24 3853326 6 • Screw, Front mount bracket to engine 25 3852090 2 • Lock washer, Front mount, engine 26 3852021 6 • Nut, Bolt, mount bracket Front 28 3852428 2 • Washer, Front mount Lower 29 3853805 2 • Rubber cushion, Engine front Port & start					
13 3850930 2 Screw, Rear mount 14 3850929 2 Nut, Rear mount 15 3852540 2 Washer, Rear mount to flywheel hsg 16 3852539 2 Nut, Rear mount 17 3852622 2 Washer, Rear mount 18 3852475 4 Screw, Engine to boat stringers 19 3852078 4 Washer, Engine to boat stringers 20 385242 2 Washer, Rear mount 21 3852483 2 Stud, Flywheel hsg to engine 22 3852065 2 Nut, Terminal to ground stud, flywheel hsg 23 3852002 1 Lock washer, Ground stud, flywheel hsg 24 3853326 6 Screw, Front mount bracket to engine 25 3852090 2 Lock washer, Front mount 26 3852090 2 Lock washer, Front mount, engine 27 3852021 6 Nut, Bolt, mount bracket Front 28 3852428 2 Washer, Front mount Lower 29 3853805 2 Rubbe					
14 3850929 2 Nut, Rear mount 15 3852540 2 Washer, Rear mount to flywheel hsg 16 3852539 2 Nut, Rear mount 17 3852622 2 Washer, Rear mount 18 3852475 4 Screw, Engine to boat stringers 19 3852078 4 Washer, Engine to boat stringers 20 385242 2 Washer, Rear mount 21 3852483 2 Stud, Flywheel hsg to engine 22 3852065 2 Nut, Terminal to ground stud, flywheel hsg 23 3852005 2 Nut, Terminal to ground stud, flywheel hsg 24 3853326 6 Screw, Front mount bracket to engine 25 3852090 2 Lock washer, Front mount 26 3852090 2 Lock washer, Front mount, engine 27 3852021 6 Nut, Bolt, mount bracket 28 3852428 2 Washer, Front mount 29 3853805 2 Rubber cushion, Engine front					
15 3852540 2 · Washer, Rear mount to flywheel hsg 16 3852539 2 · Nut, Rear mount 17 3852622 2 · Washer, Rear mount 18 3852475 4 · Screw, Engine to boat stringers 19 3852078 4 · Washer, Engine to boat stringers 20 3852542 2 · Washer, Rear mount 21 3852483 2 · Stud, Flywheel hsg to engine Ground 22 3852065 2 · Nut, Terminal to ground stud, flywheel hsg Stbd 23 3852002 1 · Lock washer, Ground stud, flywheel hsg Stbd 24 3853326 6 · Screw, Front mount bracket to engine 25 3852090 2 · Lock washer, Front mount 26 3852021 6 · Nut, Bolt, mount bracket Front 28 3852428 2 · Washer, Front mount Lower 29 3853805 2 · Rubber cushion, Engine front Port & start					
16 3852539 2 Nut, Rear mount 17 3852622 2 Washer, Rear mount 18 3852475 4 Screw, Engine to boat stringers 19 3852078 4 Washer, Engine to boat stringers 20 3852542 2 Washer, Rear mount 21 3852483 2 Stud, Flywheel hsg to engine Ground 22 3852065 2 Nut, Terminal to ground stud, flywheel hsg Stbd 23 3852002 1 Lock washer, Ground stud, flywheel hsg Stbd 24 3853326 6 Screw, Front mount bracket to engine 25 3852090 2 Lock washer, Front mount 26 3852091 2 Lock washer, Front mount, engine 27 3852021 6 Nut, Bolt, mount bracket Front 28 3852428 2 Washer, Front mount Lower 29 3853805 2 Rubber cushion, Engine front Port & start					
17 3852622 2 · Washer, Rear mount 18 3852475 4 · Screw, Engine to boat stringers 19 3852078 4 · Washer, Engine to boat stringers 20 3852542 2 · Washer, Rear mount 21 3852483 2 · Stud, Flywheel hsg to engine Ground 22 3852065 2 · Nut, Terminal to ground stud, flywheel hsg Stbd 23 3852002 1 · Lock washer, Ground stud, flywheel hsg Stbd 24 3853326 6 · Screw, Front mount bracket to engine Stbd 25 3852090 2 · Lock washer, Front mount Front 26 3852091 2 · Lock washer, Front mount, engine 27 3852021 6 · Nut, Bolt, mount bracket Front 28 3852428 2 · Washer, Front mount Lower 29 3853805 2 · Rubber cushion, Engine front Port & start					
18 3852475 4 Screw, Engine to boat stringers 19 3852078 4 Washer, Engine to boat stringers 20 3852542 2 Washer, Rear mount 21 3852483 2 Stud, Flywheel hsg to engine Ground 22 3852065 2 Nut, Terminal to ground stud, flywheel hsg Stbd 23 3852002 1 Lock washer, Ground stud, flywheel hsg Stbd 24 3853326 6 Screw, Front mount bracket to engine Stbd 25 3852090 2 Lock washer, Front mount Front 26 3852091 2 Lock washer, Front mount, engine 27 3852021 6 Nut, Bolt, mount bracket Front 28 3852428 2 Washer, Front mount Lower 29 3853805 2 Rubber cushion, Engine front Port & start					
19 3852078 4 • Washer, Engine to boat stringers 20 3852542 2 • Washer, Rear mount 21 3852483 2 • Stud, Flywheel hsg to engine Ground 22 3852065 2 • Nut, Terminal to ground stud, flywheel hsg Stbd 23 3852002 1 • Lock washer, Ground stud, flywheel hsg Stbd 24 3853326 6 • Screw, Front mount bracket to engine Stbd 25 3852090 2 • Lock washer, Front mount Front 26 3852090 2 • Lock washer, Front mount, engine 27 3852021 6 • Nut, Bolt, mount bracket Front 28 3852428 2 • Washer, Front mount Lower 29 3853805 2 • Rubber cushion, Engine front Port & start					
20 3852542 2 · Washer, Rear mount Ground 21 3852483 2 · Stud, Flywheel hsg to engine Ground 22 3852065 2 · Nut, Terminal to ground stud, flywheel hsg Stbd 23 3852002 1 · Lock washer, Ground stud, flywheel hsg Stbd 24 3853326 6 · Screw, Front mount bracket to engine - 25 3852090 2 · Lock washer, Front mount - 26 3852090 2 · Lock washer, Front mount, engine - 27 3852021 6 · Nut, Bolt, mount bracket Front 28 3852428 2 · Washer, Front mount Lower 29 3853805 2 · Rubber cushion, Engine front Port & start				• Washer Engine to hoat stringers	
21 3852483 2 Stud, Flywheel hsg to engine Ground 22 3852065 2 Nut, Terminal to ground stud, flywheel hsg Stbd 23 3852002 1 Lock washer, Ground stud, flywheel hsg Stbd 24 3853326 6 Screw, Front mount bracket to engine Stbd 25 3852090 2 Lock washer, Front mount Front 26 3852090 2 Lock washer, Front mount, engine Front 27 3852021 6 Nut, Bolt, mount bracket Front 28 3852428 2 Washer, Front mount Lower 29 3853805 2 Rubber cushion, Engine front Port & start					
22 3852065 2 • Nut, Terminal to ground stud, flywheel hsg Stbd 23 3852002 1 • Lock washer, Ground stud, flywheel hsg Stbd 24 3853326 6 • Screw, Front mount bracket to engine • Lock washer, Front mount 25 3852090 2 • Lock washer, Front mount, engine 27 3852021 6 • Nut, Bolt, mount bracket Front 28 3852428 2 • Washer, Front mount Lower 29 3853805 2 • Rubber cushion, Engine front Port & start					Ground
23 3852002 1 Lock washer, Ground stud, flywheel hsg Stbd 24 3853326 6 Screw, Front mount bracket to engine 25 3852090 2 Lock washer, Front mount 26 3852090 2 Lock washer, Front mount, engine 27 3852021 6 Nut, Bolt, mount bracket Front 28 3852428 2 Washer, Front mount Lower 29 3853805 2 Rubber cushion, Engine front Port & start				Nut. Terminal to ground stud. flywheel had	Gradia
24 3853326 6 Screw, Front mount bracket to engine 25 3852090 2 Lock washer, Front mount 26 3852090 2 Lock washer, Front mount, engine 27 3852021 6 Nut, Bolt, mount bracket Front 28 3852428 2 Washer, Front mount Lower 29 3853805 2 Rubber cushion, Engine front Port & start					Stbd
25 3852090 2 Lock washer, Front mount 26 3852090 2 Lock washer, Front mount, engine 27 3852021 6 Nut, Bolt, mount bracket Front 28 3852428 2 Washer, Front mount Lower 29 3853805 2 Rubber cushion, Engine front Port & start					
26 3852090 2 Lock washer, Front mount, engine 27 3852021 6 Nut, Bolt, mount bracket Front 28 3852428 2 Washer, Front mount Lower 29 3853805 2 Rubber cushion, Engine front Port & start					
27 3852021 6 • Nut, Bolt, mount bracket Front 28 3852428 2 • Washer, Front mount Lower 29 3853805 2 • Rubber cushion, Engine front Port & start					
29 3853805 2 Rubber cushion, Engine front Port & start			6		Front
	28	3852428	2	Washer, Front mount	Lower
30 3852433 2 • Washer, Front mount Upper			2		Port & starboar

VOLVO PENTA